


PATTERN BOOK

SINGER
KNITTING MACHINE
CARDMATIC-313

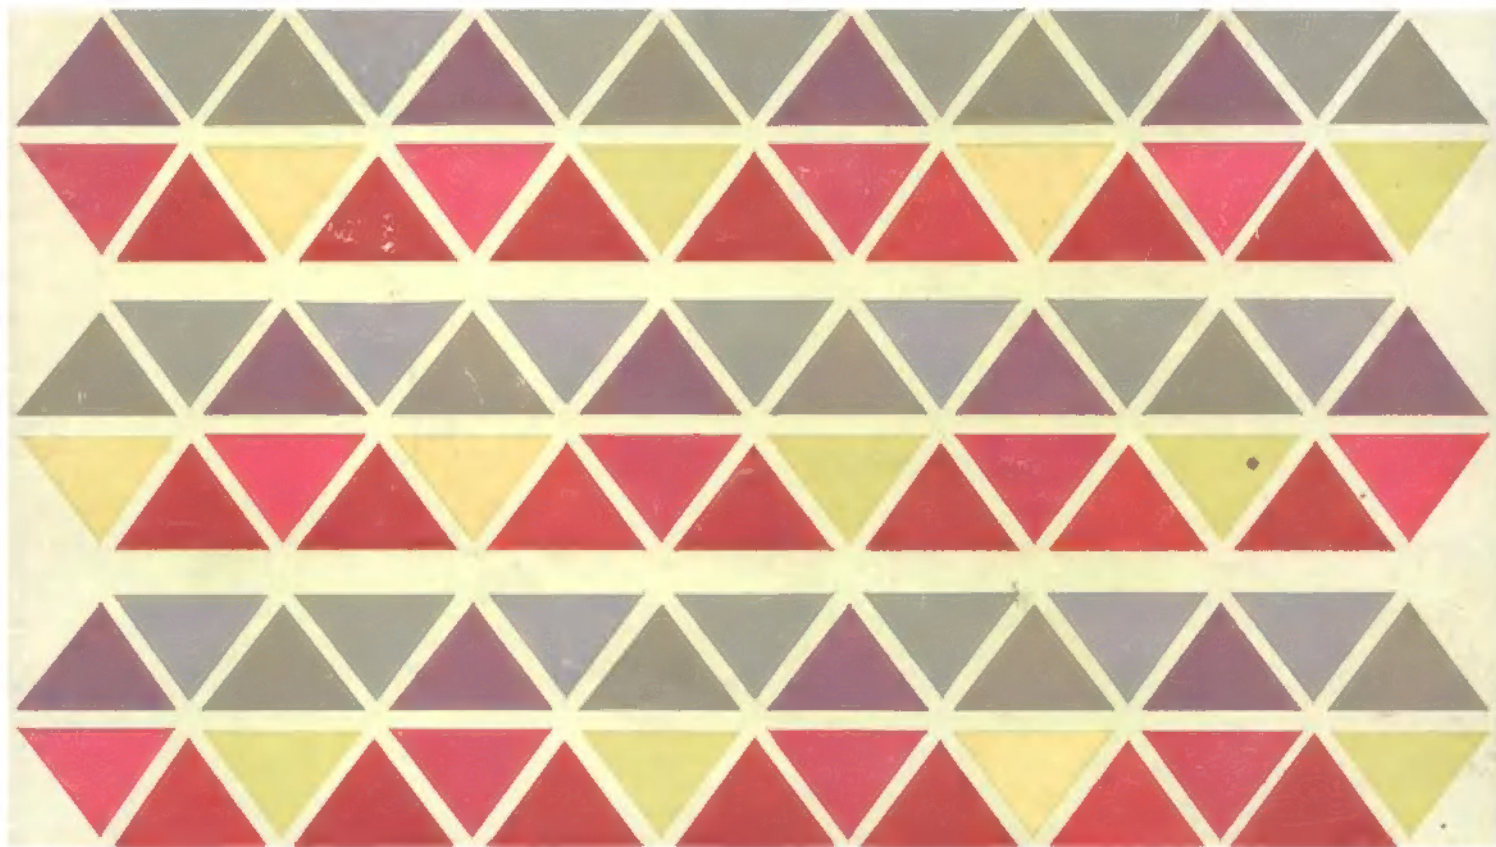

This pattern Book contains the photographs of fabrics that have been knitted by using the punched cards, and the operation tables explaining how to knit them.

Read and learn the following chapter HOW TO USE OPERATION TABLE carefully before you start pattern knitting.

Pattern knitting will be automatically performed by using any of the punched cards attached, but the way of knitting differs according to the pattern.

Please read the chapter, VARIOUS PATTERNS, in the INSTRUCTION BOOK carefully and practice all the methods of knitting described in it.

INDEX

TUCK KNITTING

A P. 4 - 20

TUCK SLIP STITCHES

B P. 21 - 31

KNIT-IN

C P. 32 - 42

WEAVING

D P. 43 - 54

LACE KNITTING

E P. 55 - 61

TWO THREAD KNITTING

F P. 62 - 64

HOW TO USE OPERATION TABLE:

This column indicates one or more colors knitted as examples. (See P. 3.)

The number of rows that shows through the window of the Pattern Panel.

One row is knitted in this position to prepare for the pattern and is not added to the total number of pattern rows.
After knitting this row, prepare for the pattern following the zero (0) row.

When the card is repeated, return the card to (■) mark of red arrow and also end the pattern on this row.

The pattern will begin with the number 0.

This indicates the pattern has been completed.

Set the Russel Lever of the carriage to the position given in this column. (See P. 3.)

Set the Cam Lever of the carriage to the position given in this column.

Set the Side Knob of the carriage to the position given in this column.

This column shows direction the carriage will move and the total number of rows to be knitted

CARD No. 0-A 00 KNITTING < 1 >					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
—		STOCKINET			
		SLIP			
0		SLIP			
1		"	"	"	
2		"	"	"	
3		"	"	"	
4	*	"	"	"	
42		"	"	"	(39)
STOP					
SET STOP KNOB TO ▼ MARK. (NEEDLE SELECTING)					

ONE PATTERN—24 STITCHES AND 44 ROWS.

This mark means to repeat the operation just performed.

Set the Stop Knob on the Pattern Panel to either ● or ▼ as indicated.

The diagram is illustrated in the operation table where needle selecting is required. (See P.3.)

* YARN

In the column, YARN, the following abbreviations are used.

- Main.....Indicates the yarn passed through the Yarn Feeder. (Refer to Fig.1)
- 2nd.....Indicates any yarn of contrasting color for Two Thread knitting, Knit-In (Fair Isle) knitting and Weaving.
- For Two thread knitting.....Indicates the yarn threaded through the Adding Yarn feeder. (Fig.2)
- For Knit-In (Fair Isle).....The secondary yarn is placed at the Yarn Holder on the Arm. In this case, Attach Auxiliary Arms into the Auxiliary Arm Slots marked "KNIT-IN" on both right and left side.
- For Weaving.....Indicates the threading yarn placed on Yarn Holder for Weaving. Attach Auxiliary Arms at the Auxiliary Arm Slots marked "WEAVING" provided both right and left. (Fig.3)

* RUSSEL LEVER

The Russel lever has two positions.

- Center..... Indicated by Blue eyes.
When Russel Lever is set at this position, the needles in B and C position will knit, while the needles in D position will not knit.
- Right..... Indicated by Red eyes.
The Russel Lever is set to this position in order to knit the needles placed in D position.


* FEEDING DIAL

Use this dial when setting the Punch Card to the Pattern Panel, either in forward or reverse direction.


* NEEDLE SELECTING

Needle selecting starts at the center of 0 on the needle bed. Transfer the stitch at the position next to the latch needles, as shown in the figure. The latch needles which are not in use are to be pushed back to A position. You may place needles which are not in use to A position to begin with. However, you must be careful not to mistake the locations of latch needles to be rested.


(See Fig. 6. The right half is the actual needle setting for the left symbol.)

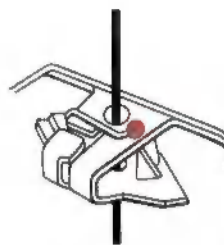


YARN FEEDER Fig. 2

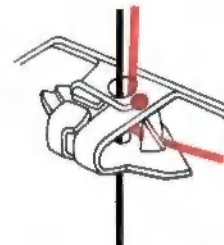

TWO THREAD KNITTING Fig. 3

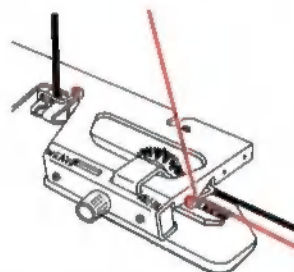

KNIT-IN Fig. 4

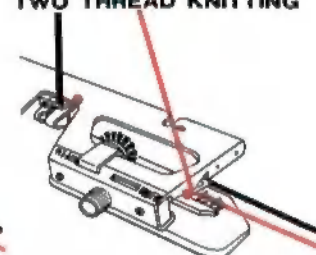

WEAVING Fig. 5

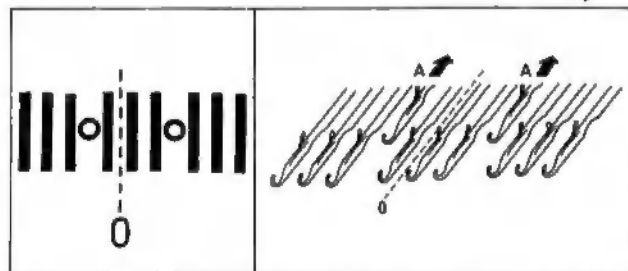


Fig. 6



CARD No. 12-A TUCK KNITTING <1>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
		TUCK			
		TUCK			
		"	"	"	
		"	"	"	
STOP					

SET STOP KNOB TO ▼ MARK.

ONE PATTERN-12 STITCHES AND 20 ROWS



CARD No. 1-A TUCK KNITTING <2>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
		TUCK			
		TUCK			
		"	"	"	
		"	"	"	
STOP					

SET STOP KNOB TO ▼ MARK.

ONE PATTERN-2 STITCHES AND 2 ROWS

CARD No. 7—A TUCK KNITTING <3>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
		STOCKINET			
0		TUCK			
1		STOCKINET			
2		*			
{					
58					
STOP					
SET STOP KNOB TO ▼ MARK. * Repeat the above procedure.					

ONE PATTERN—2 STITCHES AND 4 ROWS




CARD No. 7—A TUCK KNITTING <4>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
		TUCK			
0		TUCK			
1					
2					
3					
4	*				
58					
STOP					
SET STOP KNOB TO ▼ MARK. * Change color at every third row.					

ONE PATTERN—2 STITCHES AND 4 ROWS



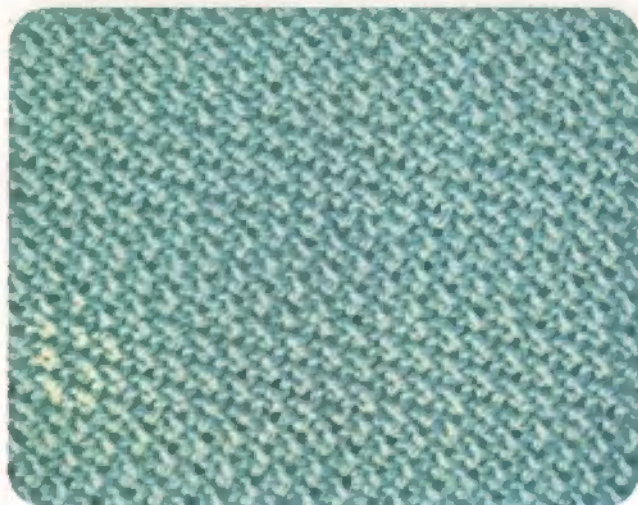






















CARD No. 8 - A TUCK KNITTING <5>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		TUCK			
{		"	"	"	{ (53)
52		"	"	"	{
STOP					
SET STOP KNOB TO ▼ MARK.					

ONE PATTERN - 3 STITCHES AND 18 ROWS


























CARD No. 7 - A TUCK KNITTING <6>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		TUCK			
{		"	"	"	{ (59)
58		"	"	"	{
STOP					
SET STOP KNOB TO ▼ MARK.					

ONE PATTERN - 2 STITCHES AND 4 ROWS

CARD No. 18-A TUCK KNITTING <7>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
					
		STOCKINET			
0		TUCK			
		TUCK			
42		"	"	"	
		"	"	"	
STOP					
SET STOP KNOB TO ▼ MARK.					

ONE PATTERN-24 STITCHES AND 44 ROWS



CARD No. 7-A TUCK KNITTING <8>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
					
		STOCKINET			
0		TUCK			
1		TUCK			
2		"	"	"	
3		"	"	"	
4	*	"	"	"	
58		"	"	"	
STOP					
SET STOP KNOB TO ▼ MARK. * Change color at every third row.					

ONE PATTERN-2 STITCHES AND 4 ROWS































CARD		No. 5 — A		TUCK KNITTING <9>	
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		TUCK			
}		TUCK			
		"	"	"	{ (59)
58		"	"	"	
STOP					

SET STOP KNOB TO ▼ MARK.

ONE PATTERN—4 STITCHES AND 2 ROWS



CARD No. 3—A TUCK KNITTING <10>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
					
		STOCKINET			
		TUCK			
		TUCK			
		"	"	"	
54		"	"	"	


STOP

SET STOP KNOB TO ▼ MARK.

ONE PATTERN - 4 STITCHES AND 8 ROWS

CARD No. 19-A TUCK KNITTING<11>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		TUCK			
46		"	"	"	(47)
STOP					
SET STOP KNOB TO ▼ MARK.					

ONE PATTERN-24 STITCHES AND 24 ROWS

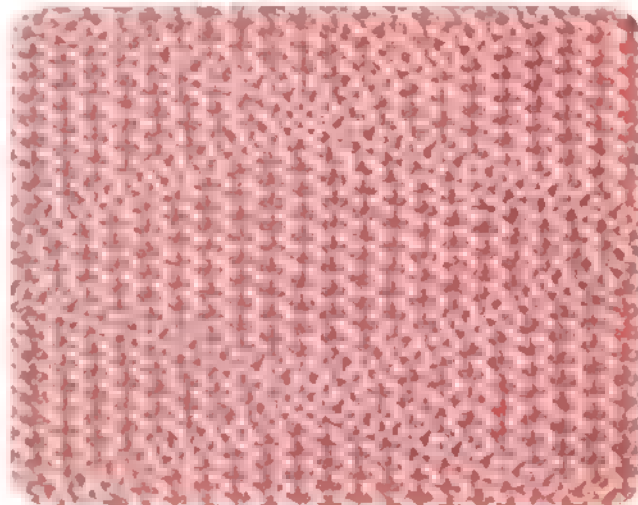

CARD No. 9-A TUCK KNITTING<11>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		TUCK			
58		"	"	"	(59)
STOP					
SET STOP KNOB TO ▼ MARK.					

ONE PATTERN-8 STITCHES AND 12 ROWS





ONE PATTERN-8 STITCHES AND 12 ROWS



* Change color every third row

ONE PATTERN-2 STITCHES AND 4 ROWS

CARD No. 4-A TUCK KNITTING <15>

PAT. RS.	YARN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		TUCK			
1		TUCK			
2		"	"	"	
3		"	"	"	
4	*	"	"	"	
58		"	"	"	(55)

STOP

SET STOP KNOB TO ▼ MARK.
* Change color at every third row.

ONE PATTERN-4 STITCHES AND 4 ROWS




CARD No. 3-A TUCK KNITTING <6>

PAT. RS.	YARN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		STOCKINET			
1		TUCK			
2		"	"	"	
3		STOCKINET	"	"	
4		"	"	"	
54	*	"	"	"	(51)

STOP

SET STOP KNOB TO ▼ MARK.
• Repeat the above procedure.

ONE PATTERN-4 STITCHES AND 8 ROWS

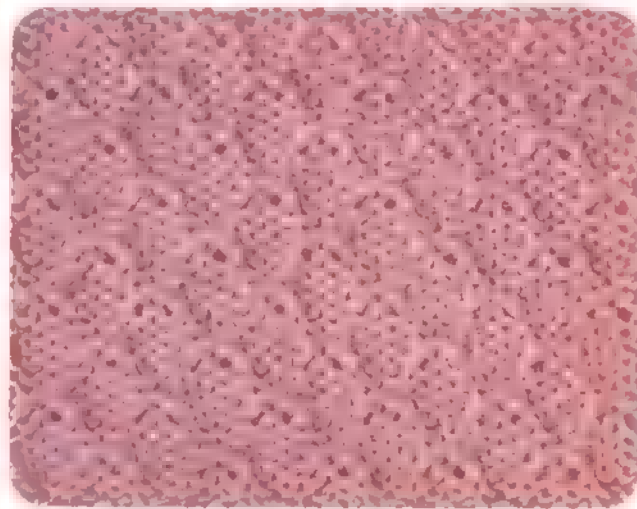




CARD No. 3-A TUCK KNITTING (17)

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
—					
—		STOCKINET			
0		TUCK			
3		TUCK			(4)
4		"	"	"	(4)
7		"	"	"	(4)
8		"	"	"	
11		"	"	"	
12		"	"	"	
* Change color at every fifth row					
54		"	"	"	

STOP
SET STOP KNOB TO ▼ MARK.

ONE PATTERN-4 STITCHES AND 24 ROWS

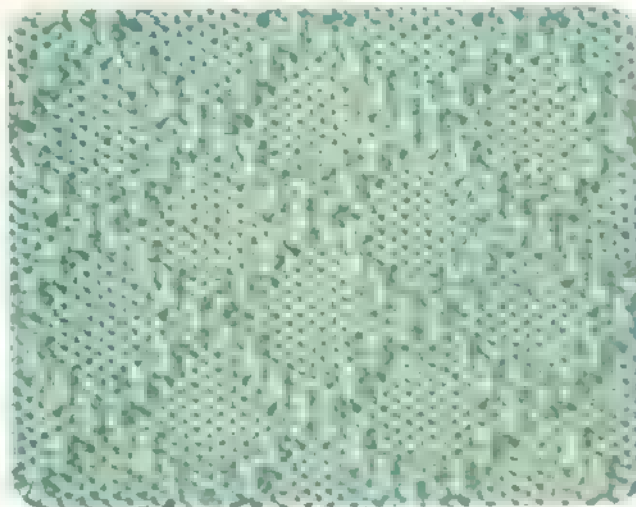

CARD No. 10-A TUCK KNITTING (18)

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
—					
—		STOCKINET			
0		TUCK			
1		TUCK			(47)
46		"	"	"	
47		"	"	"	



SET STOP KNOB TO ▼ MARK.

ONE PATTERN-8 STITCHES AND 16 ROWS

CARD

No. 3—A

TUCK KNITTING <19>

PAT. RS.
0

YARN

CAM LEV.	
STOCKINET	

RUSSEL
LEV.

SIDE LEV.
(BOTH)

D. (RS.)

	0
	#
	ρ
	η

1000000

TUCK
if
STOCKINET
*

μ


H

[illegible]

SET STOP KNOB TO ● MARK.

- Repeat the above procedure.

ONE PATTERN-4 STITCHES AND 3 ROWS

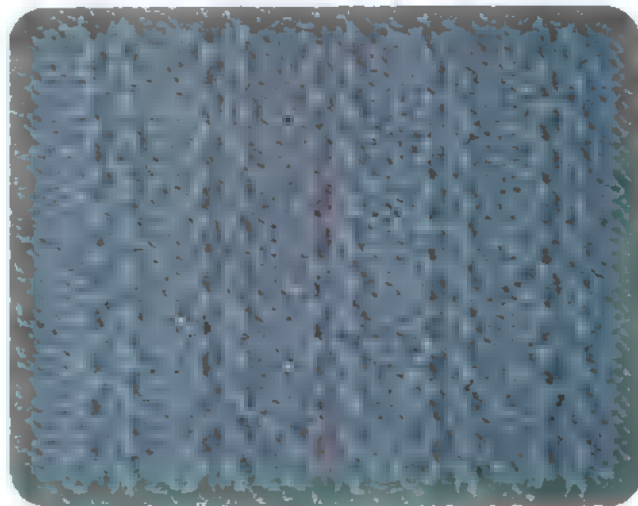

CARD

No. 3—A

TUCK KNITTING <20>

PAT. RS.

0
1
3
4
5
7
8
9
54

YARN

[REDACTED]

[REDACTED]

[REDACTED]

[REDACTED]

[REDACTED]

[REDACTED]

* Char

CAM LEV.
STOCKINET
TUCK
TUCK
IN
IN
IN
IN
IN
color at even
IN
IN

RUSSEL LEV.	●
	●
	●
	■
	ff
	ff
	ff
	ff
fifth row	ff
	ff

**SIDE LEV.
(BOTH)**

▼

▼

▼

11

12

13

14

15

16

17

D. (RS.)


* Change color at every fifth row











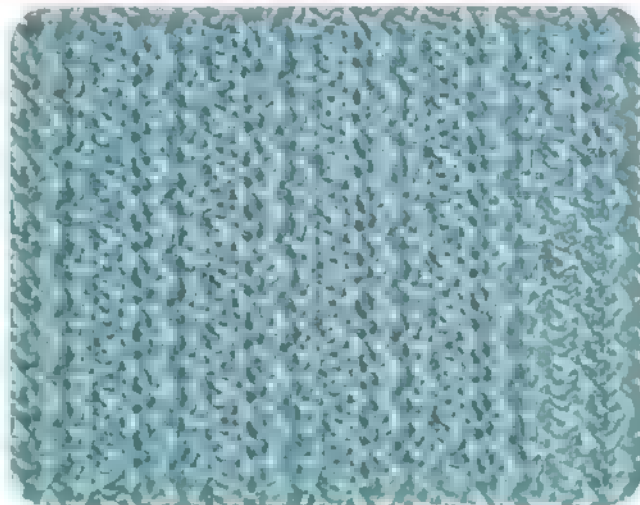








	H	H	H	$\}$	(47)
--	-----	-----	-----	------	------


STOP

ONE PATTERN-4 STITCHES AND 8 ROWS






CARD		No. 4—A		TUCK KNITTING<21>		
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)	
		 STOCKINET			  	
		TUCK				
0		TUCK				
		"	"	"	 (59)	
58		"	"	"		
STOP						









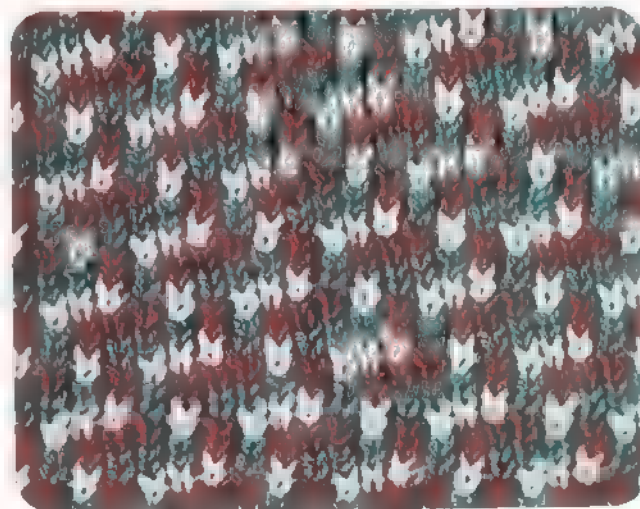




















SET STOP KNOB TO ▼ MARK.

SET STOP KNOB TO ▼ MARK.

ONE PATTERN—4 STITCHES AND 4 ROWS



CARD		No. 9—A		TUCK KNITTING<22>		
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)	
		 STOCKINET				
		TUCK				
0		TUCK				
1		"	"	"		
2		"	"	"		
3		"	"	"		
4		"	"	"		
5		"	"	"		
6	* Change color at every third row.			"		
58					 (53)	
STOP						

SET STOP KNOB TO ▼ MARK.

ONE PATTERN—6 STITCHES AND 12 ROWS


CARD No. 12-A TUCK KNITTING<23>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		TUCK			
1		TUCK			
2		"	"	"	
3		"	"	"	
4		"	"	"	
58		"	"	"	
STOP					
SET STOP KNOB TO ▼ MARK. * Change color every third row					


ONE PATTERN-12 STITCHES AND 20 ROWS



CARD No. 11-A TUCK KNITTING<24>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		TUCK			
1		TUCK			
2		"	"	"	
46		"	"	"	
STOP					
SET STOP KNOB TO ▼ MARK.					

ONE PATTERN-8 STITCHES AND 24 ROWS

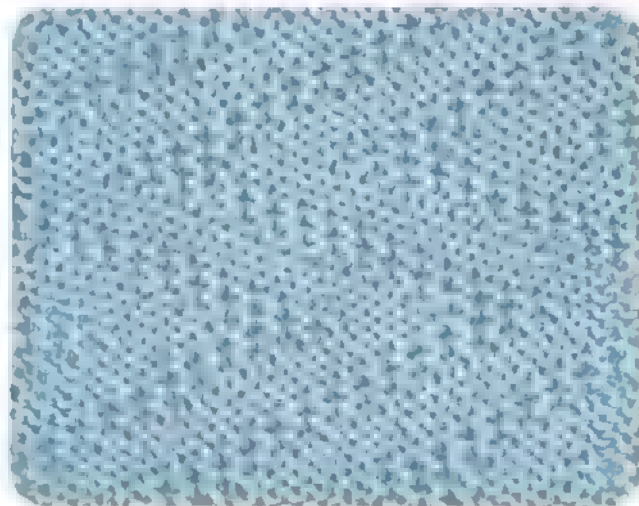


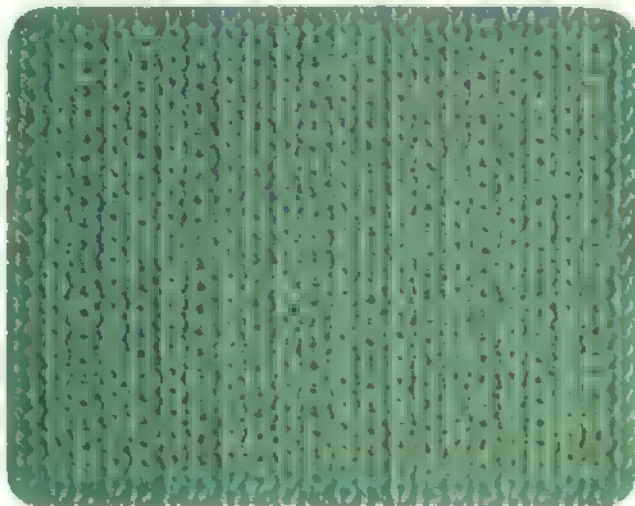

CARD No. 1 — TUCK KNITTING <25>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
0		STOCKINET			
0		TUCK			
		STOCKINET			
		*			

SET STOP KNOB TO ● MARK.
 • Repeat the above procedure.

ONE PATTERN—2 STITCHES AND 2 ROWS

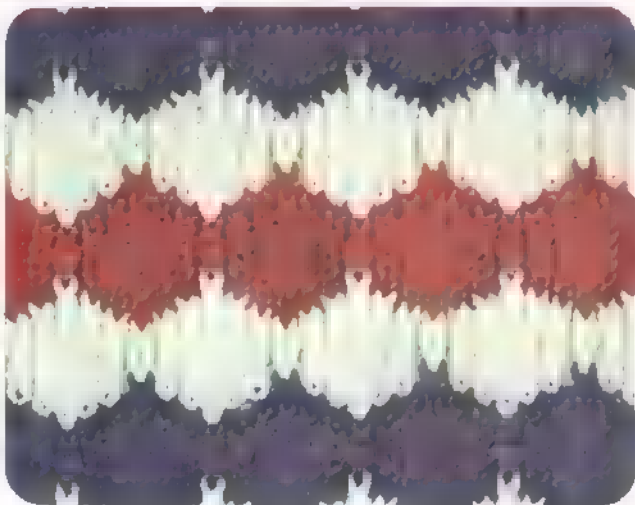

CARD No. 6 — 1 — A TUCK KNITTING <26>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		TUCK			
7		TUCK			
8		"	"	"	(8)
	*	"	"	"	
		"	"	"	(39)
46		"	"	"	

SET STOP KNOB TO ▼ MARK.
 * Change color at every eighth row in the order of WHITE, RED and BLUE.

ONE PATTERN—8 STITCHES AND 32 ROWS


CARD No.6-1-A TUCK KNITTING <27>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		TUCK			
1		TUCK			
46		"	"	"	"
STOP					



SET STOP KNOB TO ▼ MARK.

ONE PATTERN-6 STITCHES AND 16 ROWS

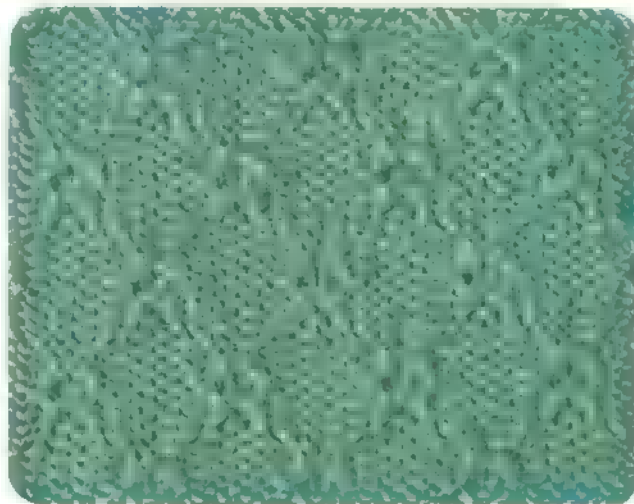

CARD No. 6-1-A TUCK KNITTING <28>


PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		TUCK			
3		TUCK			
4		"	"	"	"
46		"	"	"	"
STOP					




SET STOP KNOB TO ▼ MARK.

* Change color at every fifth row in the order of GREEN, WHITE, BROWN and WHITE.

ONE PATTERN-6 STITCHES AND 16 ROWS

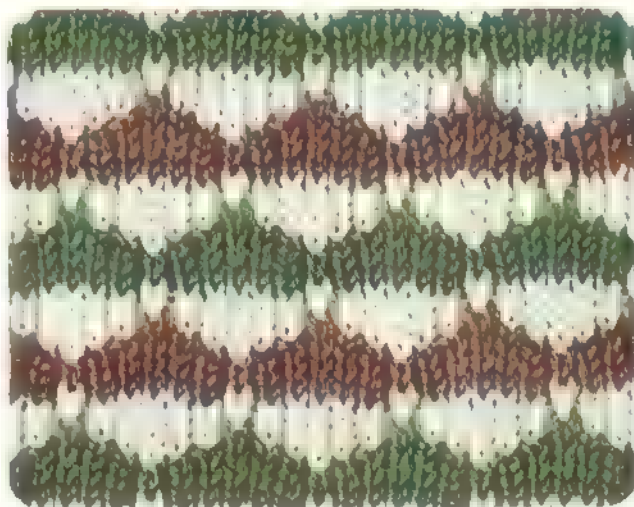

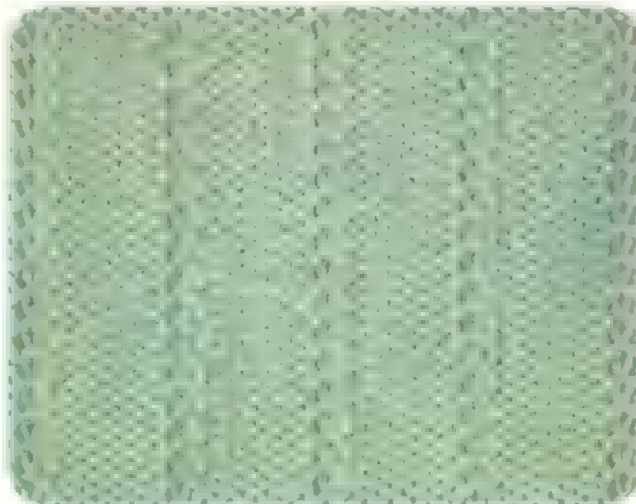


CARD No. 6-1-A TUCK KNITTING <29>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
0		STOCKINET			
0		TUCK			
#		STOCKINET	#	#	

SET STOP KNOB TO ● MARK.
• Repeat the above procedure.

ONE PATTERN-6 STITCHES AND 2 ROWS

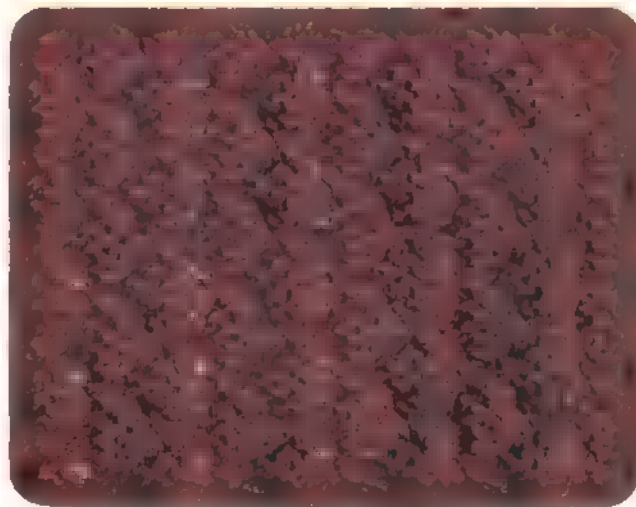























CARD No. 3-A TUCK KNITTING <30>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
		TUCK			
0		TUCK			
#		#	#	#	
54		#	#	#	
STOP					

SET STOP KNOB TO ▼ MARK. (NEEDLE SELECTING)

ONE PATTERN-4 STITCHES AND 1 ROWS

TUCK KNITTING<3>

PAT. RS.	YARN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			  
 0		TUCK			
 1		TUCK			 
58		"	"	"	 

STOP























(59)



ONE PATTERN - 5 STITCHES AND 4 ROWS



TUCK KNITTING<32>

PAT. RS.	YARN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)  
		STOCKINET			
		TUCK			
0		TUCK			
		"	"	"	
58		"	"	"	

(59)

STOP



ONE PATTERN—8 STITCHES AND 4 ROWS






CARD No. 5—A TUCK KNITTING <33>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		TUCK			
		TUCK			
58		"	"	"	(59)
		"	"	"	
STOP					

SET STOP KNOB TO ▼ MARK. (NEEDLE SELECTING)

ONE PATTERN—4 STITCHES AND 2 ROWS

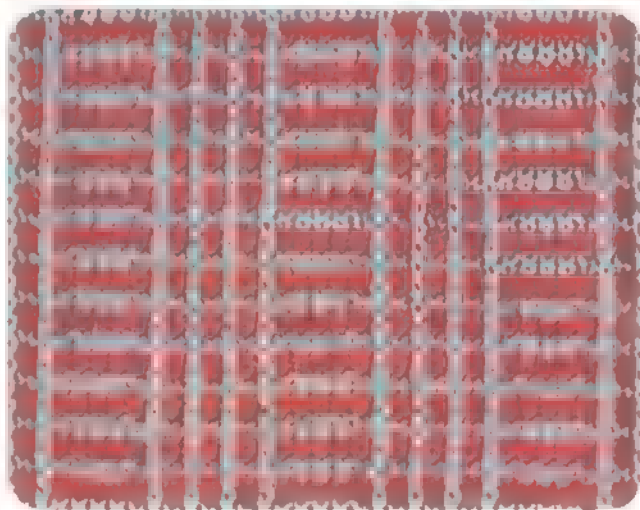
















CARD No. 12—A TUCK KNITTING <34>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
2		STOCKINET			
2		TUCK			
"		"	"	"	
"		STOCKINET	"	"	
"		"	"	"	
* (1)		* (2)			

SET STOP KNOB TO ● MARK.
 * (1) Change color at every third row
 * (2) Repeat the above procedure.

ONE PATTERN—12 STITCHES AND 4 ROWS

CARD No. 18-A TUCK SLIP STITCHES<1>

PAT. RS.	YARN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		SLIP			
1		SLIP			
2		"	"	"	
3		"	"	"	
4	*	"	"	"	
42		"	"	"	


STOP




SET STOP KNOB TO ▼ MARK.

* Change color at every third row.

ONE PATTERN—24 STITCHES AND 44 ROWS

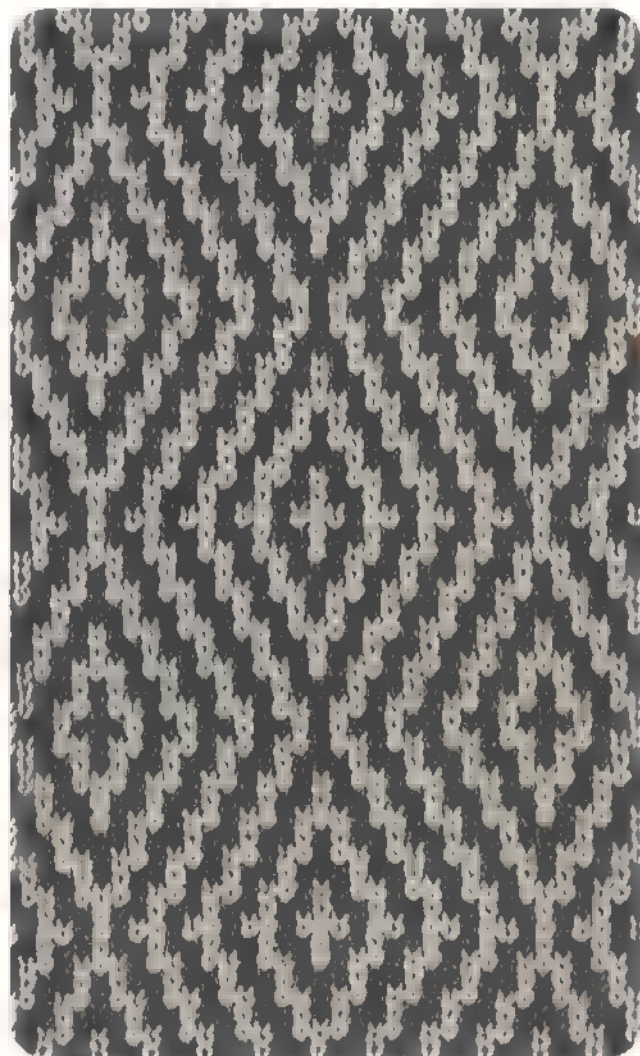

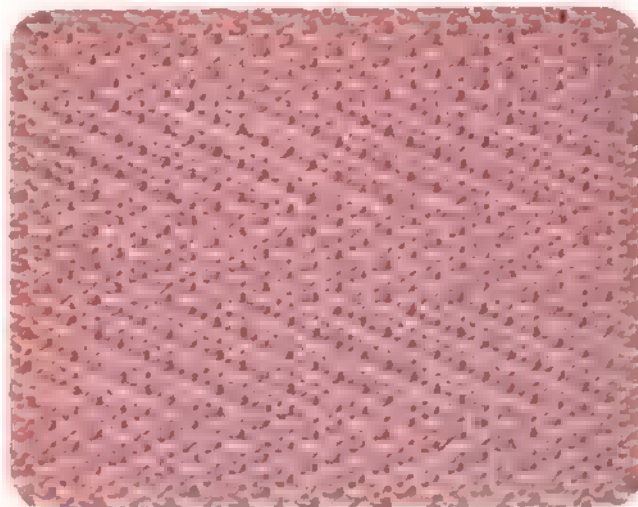


CARD No. 8—A TUCK SLIP STITCHES<2>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
0		STOCKINET			
52		SLIP			
		SLIP			
		"	"	"	
		"	"	"	

STOP

SET STOP KNOB TO ▼ MARK.

ONE PATTERN—3 STITCHES AND 18 ROWS

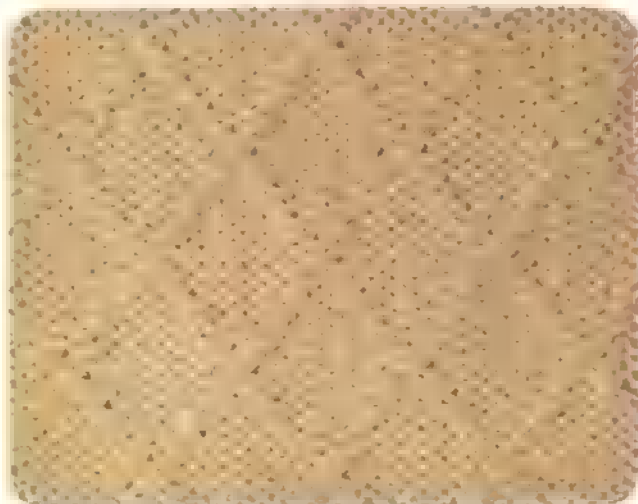

CARD No. 10—A TUCK SLIP STITCHES<3>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
0		STOCKINET			
46		SLIP			
		SLIP			
		"	"	"	
		"	"	"	

STOP

SET STOP KNOB TO ▼ MARK.

ONE PATTERN—8 STITCHES AND 16 ROWS

CARD No. 2 — A TUCK SLIP STITCHES<4>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		SLIP			
1		SLIP			
2		"	"	"	
3		"	"	"	
4	*	"	"	"	
58		"	"	"	(55)


STOP



SET STOP KNOB TO ▼ MARK.

* Change color at every third row

ONE PATTERN - 4 STITCHES AND 4 ROWS

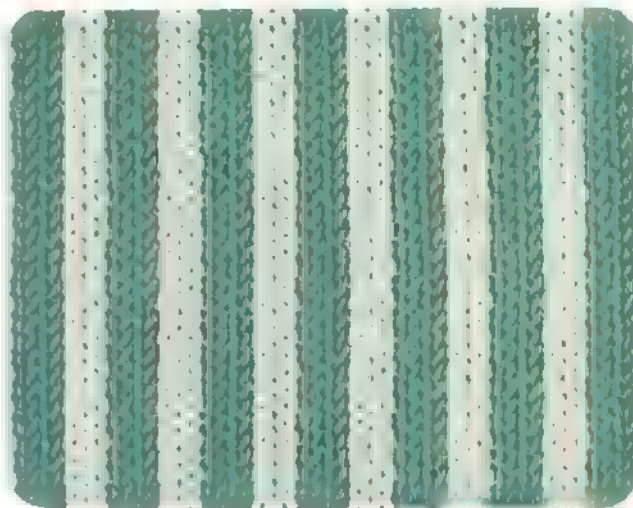

CARD No. 3 — TUCK SLIP STITCHES<5>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		STOCKINET			
1		SLIP			
2		"	"	"	
3		STOCKINET	"	"	
4		"	"	"	
54	* (1)	* (2)	"	"	(51)

STOP






SET STOP KNOB TO ▼ MARK.

* (1) Change color at every third row.

* (2) Repeat the above procedure.

ONE PATTERN - 4 STITCHES AND 8 ROWS

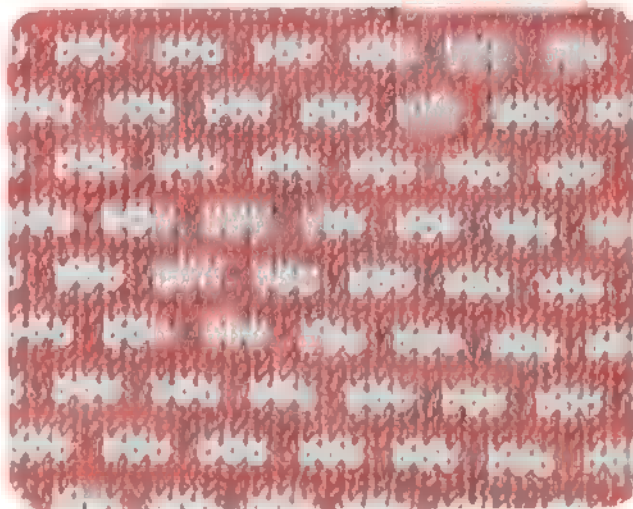

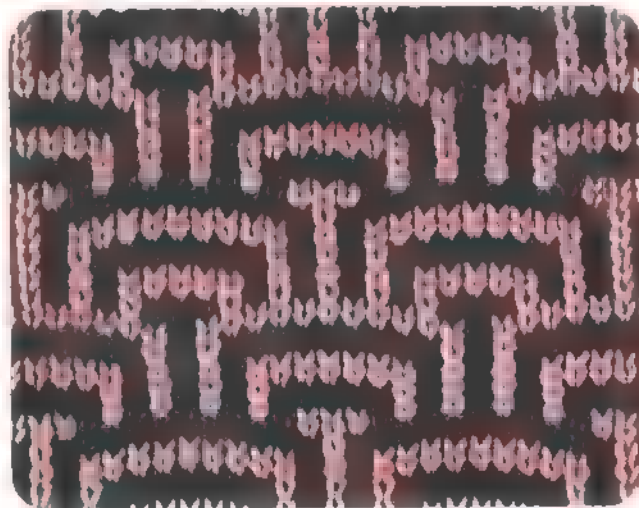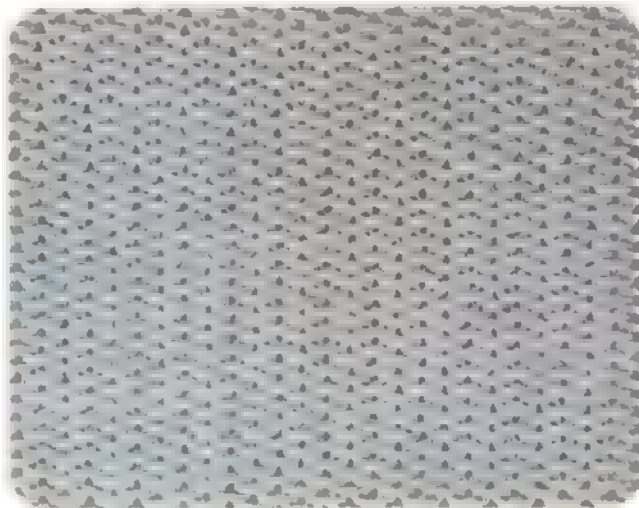

CARD No. 1 — A TUCK SLIP STITCHES<6>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		 STOCKINET			
		SLIP			
0		SLIP			
58					
STOP					(59)

SET STOP KNOB TO ▼ MARK.

ONE PATTERN - 2 STITCHES AND 2 ROWS

CARD No. 12-A TUCK SLIP STITCHES(7)

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		SLIP			
1		SLIP			
2					
3					
4	*				
58					

STOP

SET STOP KNOB TO ▼ MARK.

* Change color at every third row.


ONE PATTERN-12 STITCHES AND 20 ROWS

CARD No. 7 - A TUCK SLIP STITCHES<8>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		SLIP			
58		SLIP			
STOP					

SET STOP KNOB TO ▼ MARK.

ONE PATTERN - 2 STITCHES AND 4 ROWS

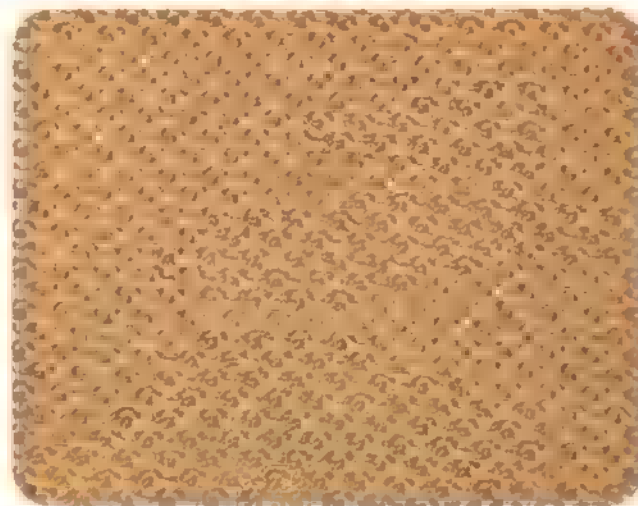


CARD No. 3 - A TUCK SLIP STITCHES<9>


PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		SLIP			
1		SLIP			
2					
3					
4	*				
54					
STOP					

SET STOP KNOB TO ▼ MARK.

* Change color at every third row.

ONE PATTERN - 4 STITCHES AND 8 ROWS

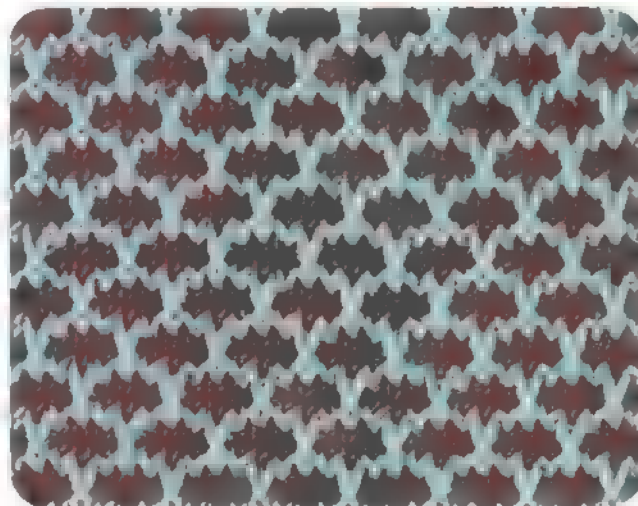

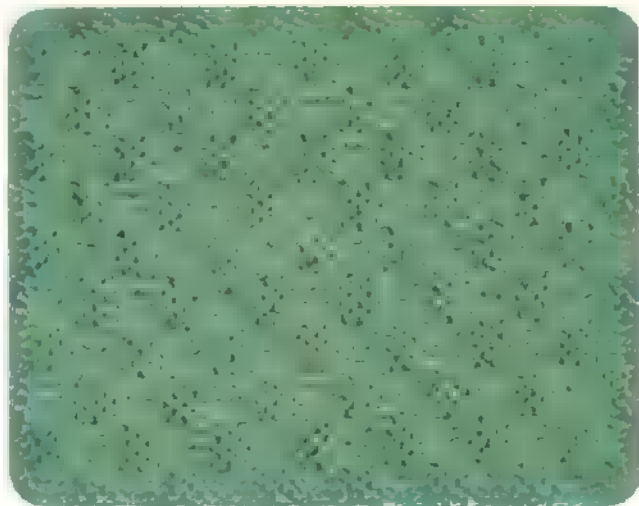

CARD No. 3 - A TUCK SLIP STITCHES<10>


PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		SLIP			
		SLIP			
54		"	"	"	
		"	"	"	

STOP



SET STOP KNOB TO ▼ MARK.

ONE PATTERN-4 STITCHES AND 8 ROWS

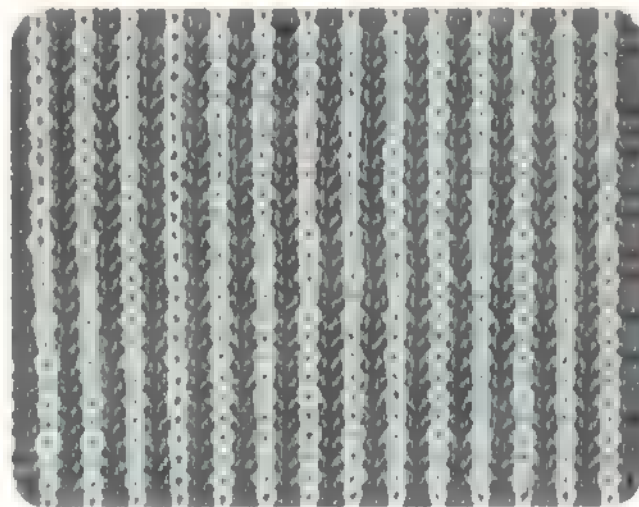

CARD No. 7 - A TUCK SLIP STITCHES<11>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		SLIP			
1		"	"	"	
2		"	"	"	
3		"	"	"	
4		"	"	"	
58		"	"	"	

STOP



SET STOP KNOB TO ▼ MARK.

* Change color every third row.

ONE PATTERN-2 STITCHES AND 4 ROWS


CARD No. 11 — A TUCK SLIP STITCHES < 12 >

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
0		STOCKINET			
		SLIP			
		SLIP			
46		"	"	"	
		"	"	"	
STOP					



SET STOP KNOB TO ▼ MARK.

ONE PATTERN — 8 STITCHES AND 24 ROWS

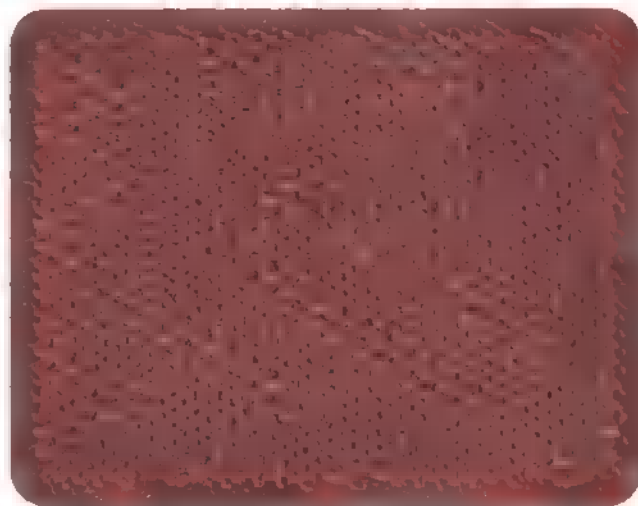

CARD No. 9 — A TUCK SLIP STITCHES < 13 >


PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
0		STOCKINET			
		SLIP			
		SLIP			
58		"	"	"	
		"	"	"	
STOP					



SET STOP KNOB TO ▼ MARK.

ONE PATTERN — 8 STITCHES AND 12 ROWS



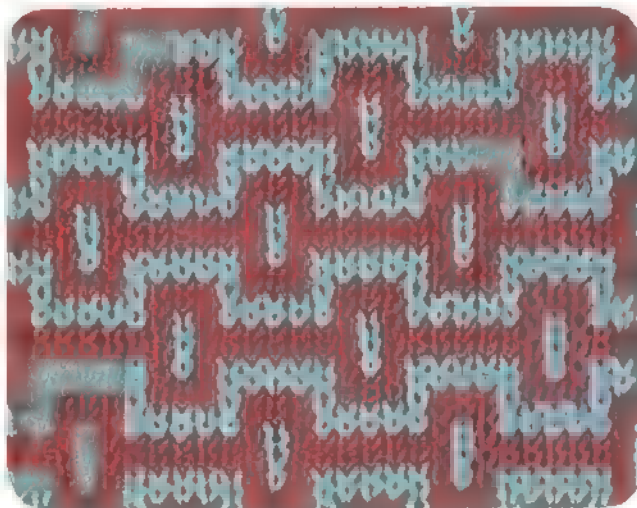

CARD No. 10—A TUCK SLIP STITCHES<14>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
—		STOCKINET	●	▼	↔
0		SLIP	●	▼	→
1		SLIP	●	▼	←
2		"	"	"	→
3		"	"	"	←
4	*	"	"	"	→
46		"	"	"	← (43)

STOP



SET STOP KNOB TO ▼ MARK.

* Change color at every third row.

ONE PATTERN—8 STITCHES AND 16 ROWS



CARD No. 11—A TUCK SLIP STITCHES<15>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
—		STOCKINET	●	▼	↔
0		SLIP	●	▼	→
1		SLIP	●	▼	←
2		"	"	"	→
3	*	"	"	"	←
46		"	"	"	→ (44)

STOP



SET STOP KNOB TO ▼ MARK.

* Change color at every third row.


ONE PATTERN—8 STITCHES AND 24 ROWS

CARD No. 2—A TUCK SLIP STITCHES<1

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET	●	▼	→
0		SLIP	●	▼	→
1		SLIP	●	▼	←
58		"	"	"	←
STOP					

SET STOP KNOB TO ▼ MARK.

ONE PATTERN—4STITCHES AND 4ROWS

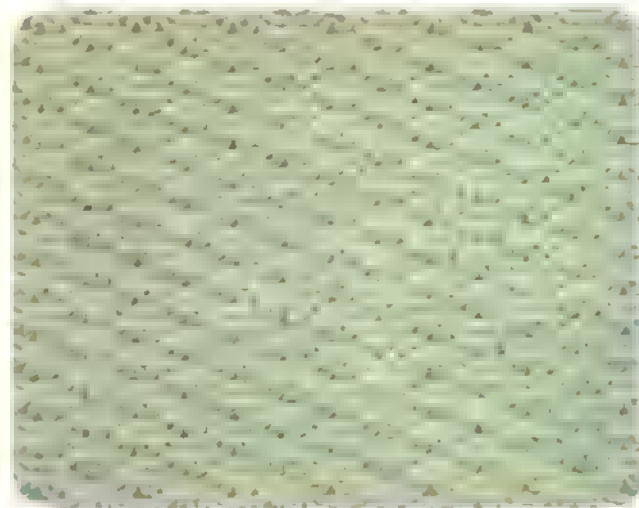



CARD No. 8—A TUCK SLIP STITCHES<17>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET	●	▼	→
0		SLIP	●	▼	→
1		SLIP	●	▼	←
2		"	"	"	→
3		"	"	"	←
4		"	"	"	→
5		"	"	"	←
6	* Change color at every third row.				→
52	"	"	"	"	←
STOP					

SET STOP KNOB TO ▼ MARK.

ONE PATTERN—3STITCHES AND 18ROWS

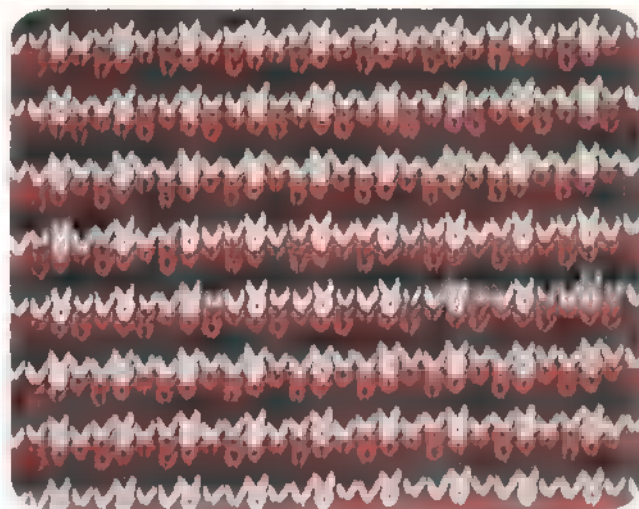

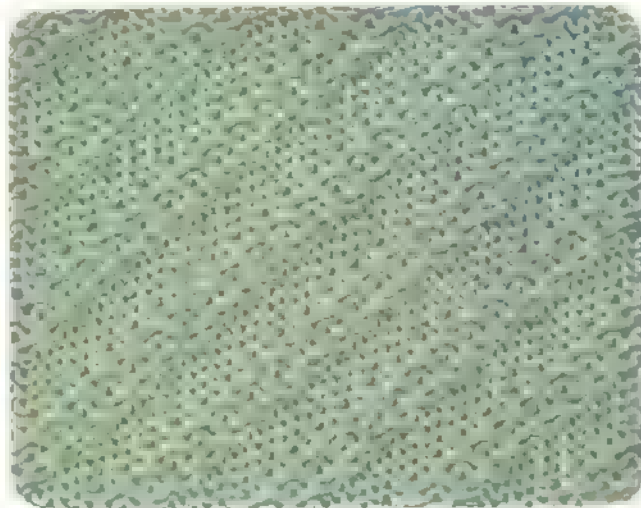

CARD No. 9-A TUCK SLIP STITCHES<18>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
0		STOCKINET			
58		SLIP			
		SLIP			
		"	"	"	
		"	"	"	

STOP

(59)



SET STOP KNOB TO ▼ MARK.

ONE PATTERN-6 STITCHES AND 12 ROWS



CARD No. 18-A TUCK SLIP STITCHES<19>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
0		STOCKINET			
42		SLIP			
		SLIP			
		"	"	"	
		"	"	"	

STOP

(43)

















SET STOP KNOB TO ▼ MARK.

ONE PATTERN-24 STITCHES AND 44 ROWS

CARD No. 2—A TUCK SLIP STITCHES (20)

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
0					 
		STOCKINET			


0		SLIP			
"		"	"	"	
"		"	"	"	
"		STOCKINET	"	"	
"		"	"	"	
"		"	"	"	
	*(1)	*(2)			



SET STOP KNOB TO ● MARK.

- (1) Change color every fourth row.
- (2) Repeat the above procedure.

ONE PATTERN—4 STITCHES AND 8 ROWS

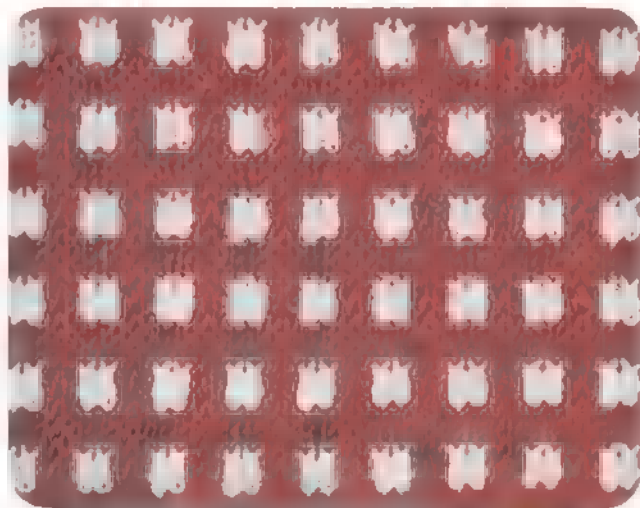




CARD No. 20 - A						KNIT-IN<1>	
PAT. RS.	YARN		CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)	
	2nd	MAIN					
—			KNIT-IN 1				
0			KNIT-IN 2				} (5)
1			"				
4			"	"	"		} (3)
5			"	"	"		
6			"	"	"		
7			"	"	"		} (50)
8			"	"	"		
9			"	"	"		} (50)
10			"	"	"		
59			"	"	"		} (50)
60			STOCKINET	"	"		




SET STOP KNOB TO ▼ MARK.


- Set Stop knob to ● mark and knit as many STOCKINET rows as desired.

ONE PATTERN—24 STITCHES AND 60 ROWS

CARD		No. 15-A		KNIT-IN<2>	
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
—	2nd MAIN	KNIT-IN 1	●	●	↔
0		KNIT-IN 2	●	●	↔
46		"	"	"	↔ (47)
STOP					
 SET STOP KNOB TO ▼ MARK.					

ONE PATTERN—24 STITCHES AND 48 ROWS

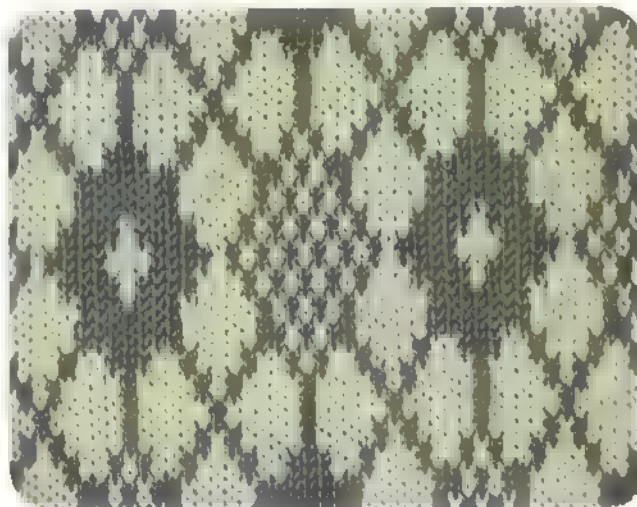

CARD		No. 16-A		KNIT-IN<3>	
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
—	2nd MAIN	KNIT-IN 1	●	●	↔
0		KNIT-IN 2	●	●	↔
58		"	"	"	↔ (59)
STOP					
 SET STOP KNOB TO ▼ MARK.					


ONE PATTERN—24 STITCHES AND 30 ROWS





CARD		No. 12-A		KNIT-IN <4>		
PAT. RS.	YARN	CAM LEV.	RUSSEL	SIDE LEV.	D. (RS.)	
	2nd MAIN		LEV.	(BOTH)		
—		KNIT-IN 1	●	●	→	
0		KNIT-IN 2	●	●	→	
58		"	"	"	← (59)	
STOP						
<div> </div> SET STOP KNOB TO ▼ MARK.						


ONE PATTERN-12 STITCHES AND 20 ROWS

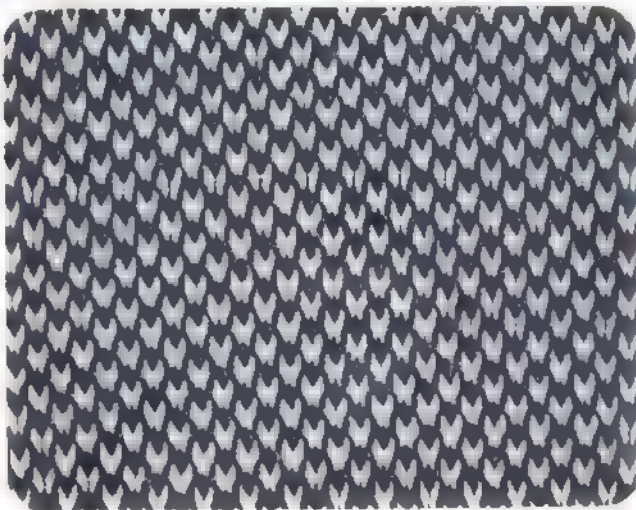


CARD		No. 1-A		KNIT-IN <5>		
PAT. RS.	YARN	CAM LEV.	RUSSEL	SIDE LEV.	D. (RS.)	
	2nd MAIN		LEV.	(BOTH)		
—		KNIT-IN 1	●	●	→	
0		KNIT-IN 2	●	●	→	
58		"	"	"	← (59)	
STOP						
<div> </div> SET STOP KNOB TO ▼ MARK.						

ONE PATTERN-2 STITCHES AND 11 ROWS


CARD No. 4-A		KNIT-IN <6>			
PAT. RS.	YARN 2nd MAIN	CAM LEV. ⊙	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.) ↔
↩		KNIT-IN 1	●	●	↔
↩		KNIT-IN 2	●	●	→
0		KNIT-IN 2	●	●	←
}		"	"	"	}
58		"	"	"	←
STOP					

 SET STOP KNOB TO ▼ MARK.

ONE PATTERN-4 STITCHES AND 4 ROWS

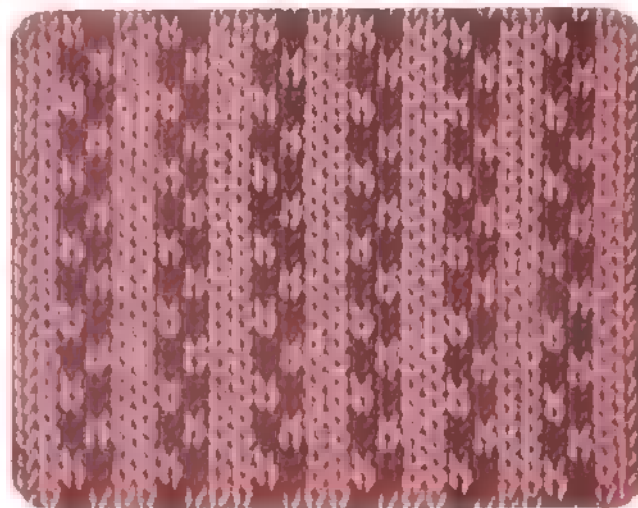


CARD No. 9-A		KNIT-IN <7>			
PAT. RS.	YARN 2nd MAIN	CAM LEV. ⊙	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.) ↔
↩		KNIT-IN 1	●	●	↔
↩		KNIT-IN 2	●	●	→
0		KNIT-IN 2	●	●	←
}		"	"	"	}
58		"	"	"	←
STOP					

 SET STOP KNOB TO ▼ MARK.

ONE PATTERN-6 STITCHES AND 12 ROWS



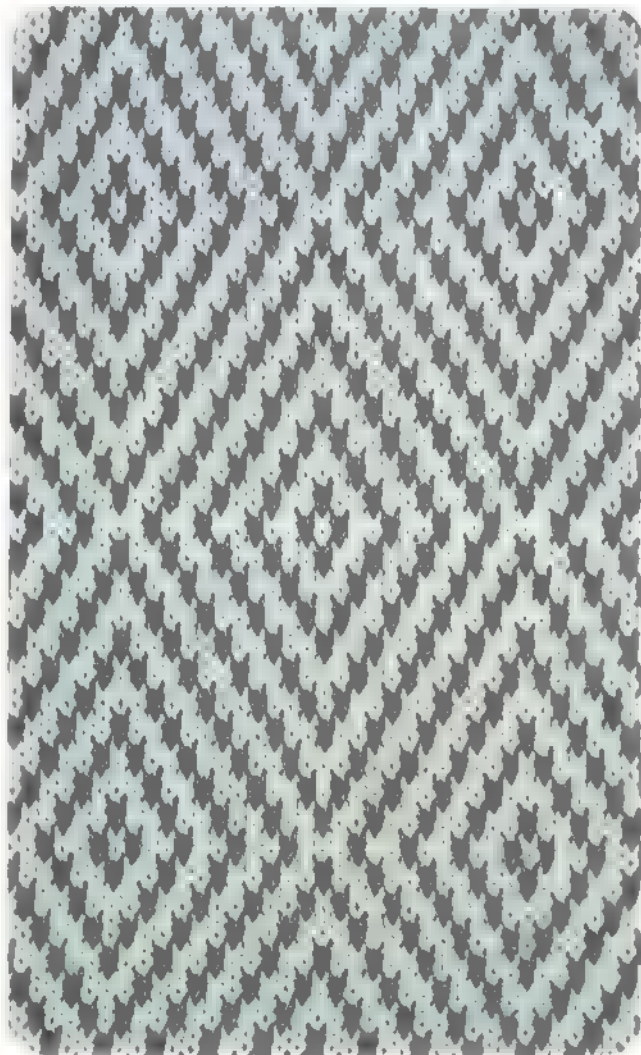


CARD N. 18-A		KNIT - IN <8>			
PAT. RS.	YARN 2nd MAIN	CAM LEV. ⬆ KNIT-IN 1	RUSSEL LEV. ●	SIDE LEV. (BOTH) ●	D. (RS.) ↔ →
0		KNIT-IN 2	●	●	→
42		KNIT-IN 2	●	●	←
		"	"	"	↔ (43)
		"	"	"	↔
STOP					

SET STOP KNOB TO ▼ MARK.

ONE PATTERN-24STITCHES AND 44ROWS

ONE PATTERN-8 STITCHES AND 24 ROWS

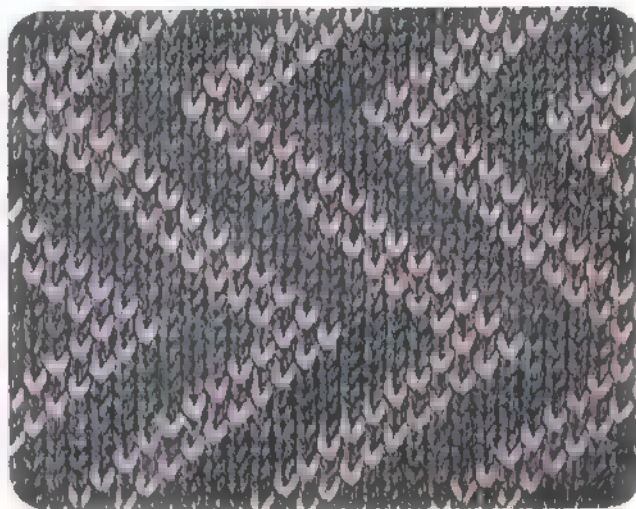

ONE PATTERN—24 STITCHES AND 44 ROWS





CARD No. 2-A		KNIT-IN <11>			
PAT. RS.	YARN 2nd MAIN	CAM LEV. ⬇	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
 0 58 STOP		KNIT-IN 1	●	●	→
		KNIT-IN 2	●	●	→
		KNIT-IN 2	●	●	←
		"	"	"	↔ (59)
		"	"	"	↔

SET STOP KNOB TO ▼ MARK.

ONE PATTERN-4 STITCHES AND 4 ROWS



CARD No. 13-A		KNIT-IN <12>			
PAT. RS.	YARN 2nd MAIN	CAM LEV. ⬇	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
 0 58 STOP		KNIT-IN 1	●	●	→
		KNIT-IN 2	●	●	→
		KNIT-IN 2	●	●	←
		"	"	"	↔ (59)
		"	"	"	↔

SET STOP KNOB TO ▼ MARK.


























ONE PATTERN-12 STITCHES AND 12 ROWS



ONE PATTERN-4 STITCHES AND 1 ROWS

SET STOP KNOB TO ONE PATTERN-3 STITCHES AND 18 ROWS

KNIT-IN <17>

PAT. RS.	YARN [2nd] MAIN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		KNIT-IN 1			  
		KNIT-IN 2			
0		KNIT-IN 2			 
		"	"	"	 
46		"	"	"	 

STOP

(47)

STOP



SET STOP KNOB TO ▼ MARK.

ONE PATTERN-24 STITCHES AND 24 ROWS



CARD No. 2 A

KNIT - IN <18>


PAT. RS.	YARN	CAM LEV.	MUSSEL LEV.	SIDE LEV.	D. (RS.)
	2nd MAIN		LEV.	(BOTH)	
—		KNIT-IN 1	●	●	→
—		KNIT-IN 2	●	●	→
0			●	●	←
1		"	"	"	→
2		"	"	"	←
3		"	"	"	→
4		"	"	"	←
5		"	"	"	→
6		"	"	"	←
7		"	"	"	→
58	* Change color at every third row				→ (S1)

STOP

SET STOP KNOB TO
▼ MARK.

ONE PATTERN-4 STITCHES AND 8 ROWS



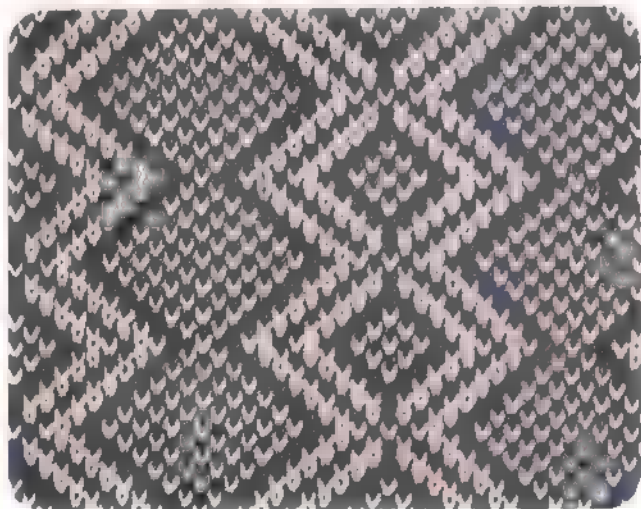

CARD No. 14-A				KNIT-IN <19>		
PAT. RS.	YARN		CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
	2nd	MAIN				
			KNIT-IN 1			
			KNIT-IN 2			
0			KNIT-IN 2			
}			"	"	"	
58			"	"	"	
STOP						

SET STOP KNOB TO ▼ MARK.

ONE PATTERN-24 STITCHES AND 12 ROWS




CARD No. 17-A				KNIT-IN <20>		
PAT. RS.	YARN		CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
	2nd	MAIN				
0			STOCKINET			
0			KNIT-IN 1			
"			KNIT-IN 2	"	"	
}			"	"	"	
19			"	"	"	
20			STOCKINET	"	"	
"			"	"	"	

* (1) SET STOP KNOB TO ● MARK.
 * (2) SET STOP KNOB TO ▼ MARK.
 * (3) SET STOP KNOB TO ● MARK.
 Two rows STOCKINET should be knit ■ dark brown as shown in picture.

ONE PATTERN-24 STITCHES AND 24 ROWS


CARD		No. 14-A		WEAVING <1>		
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)	
	2nd MAIN					
—		STOCKINET	●	▼	→	
0		STOCKINET	●	▼	→	
{		STOCKINET	●	▼	←	
58		"	"	"	{ (59)	
STOP						

 SET STOP KNOB TO ▼ MARK.


ONE PATTERN-24 STITCHES AND 12 ROWS




CARD		No. 1-A		WEAVING <2>		
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)	
	2nd MAIN					
—		STOCKINET	●	▼	→	
0		STOCKINET	●	▼	→	
{		STOCKINET	●	▼	←	
58		"	"	"	{ (59)	
STOP						

 SET STOP KNOB TO ▼ MARK.


ONE PATTERN-2 STITCHES AND 2 ROWS

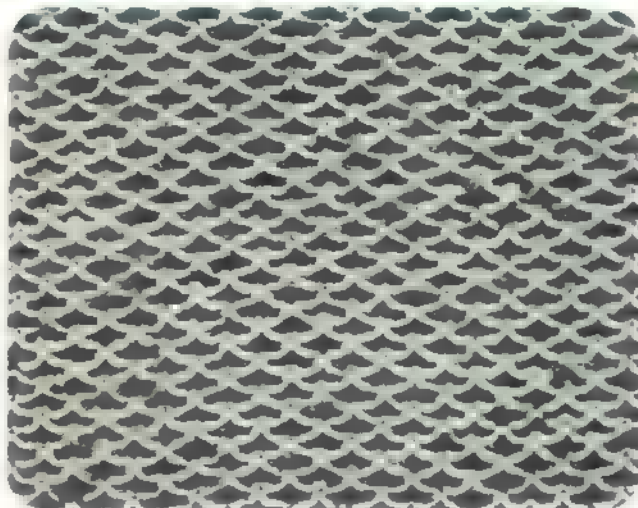


CARD		No. 3-A		WEAVING <5>			
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)		
	2nd MAIN	STOCKINET	●	▼	↔		
0		STOCKINET	●	▼	→		
1		STOCKINET	●	▼	↔	(55)	
54		"	"	"	←		
STOP							

 SET STOP KNOB TO ▼ MARK.


ONE PATTERN-4 STITCHES AND 8 ROWS

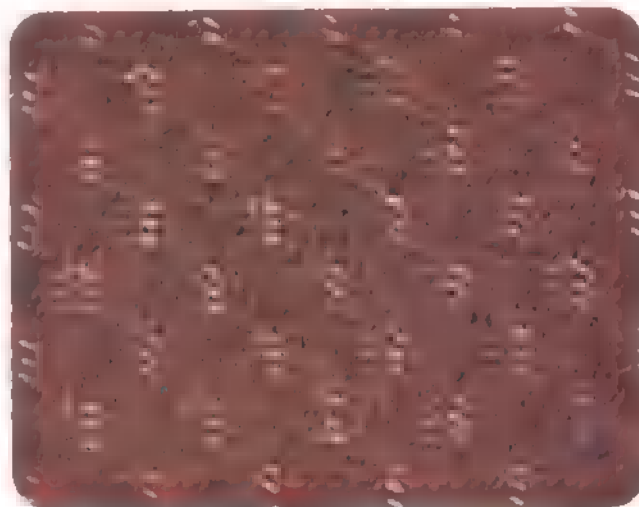


CARD		No. 19-A		WEAVING <6>			
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)		
	2nd MAIN	STOCKINET	●	▼	↔		
0		STOCKINET	●	▼	→		
1		STOCKINET	●	▼	↔	(47)	
46		"	"	"	←		
STOP							


 SET STOP KNOB TO ▼ MARK.

ONE PATTERN- 24 STITCHES AND 24 ROWS

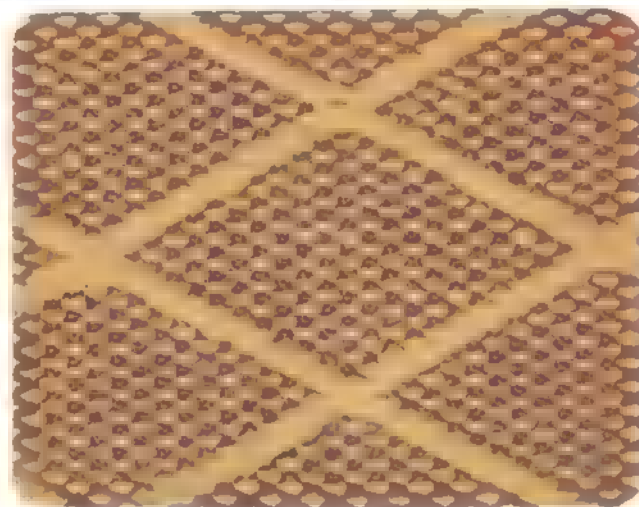


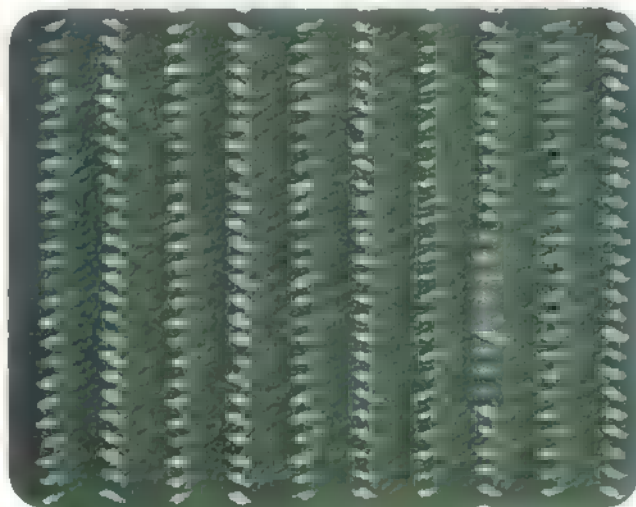


CARD No. 2-A					WEAVING <7>
PAT. RS.	YARN [2nd] MAIN	CAM LEV. ⊙	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
0		STOCKINET	●	▼	↔
0		STOCKINET	●	▼	←
x		"	"	"	→

 SET STOP KNOB TO ● MARK.

ONE PATTERN-4 STITCHES AND 1 ROWS

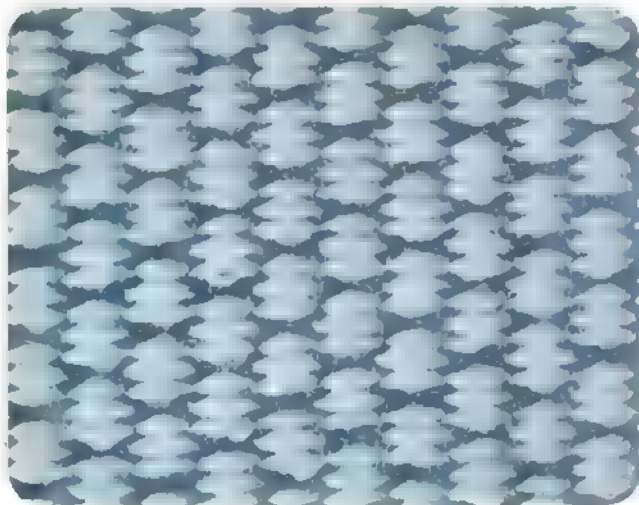

CARD No. 2-A					WEAVING <8>
PAT. RS.	YARN [2nd] MAIN	CAM LEV. ⊙	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
—		STOCKINET	●	▼	↔
0		STOCKINET	●	▼	↔
1		STOCKINET	●	▼	←
58		"	"	"	→
STOP					(59)


 SET STOP KNOB TO ▼ MARK.

ONE PATTERN-4 STITCHES AND 4 ROWS

CARD		No. 8 - A		WEAVING <9>			
PAT. RS.	YARN 2nd MAIN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)		
		STOCKINET					
0		STOCKINET					
52		STOCKINET				} (53)	
STOP							

SET STOP KNOB TO ▼ MARK.

ONE PATTERN - 3 STITCHES AND 18 ROWS

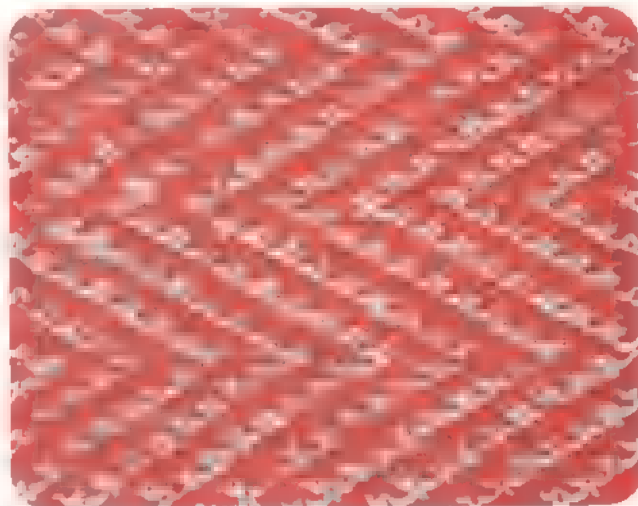


CARD		No. 4 - A		WEAVING <10>			
PAT. RS.	YARN 2nd MAIN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)		
		STOCKINET					
0		STOCKINET					
58		STOCKINET				} (59)	
STOP							

SET STOP KNOB TO ▼ MARK.

ONE PATTERN - 4 STITCHES AND 4 ROWS



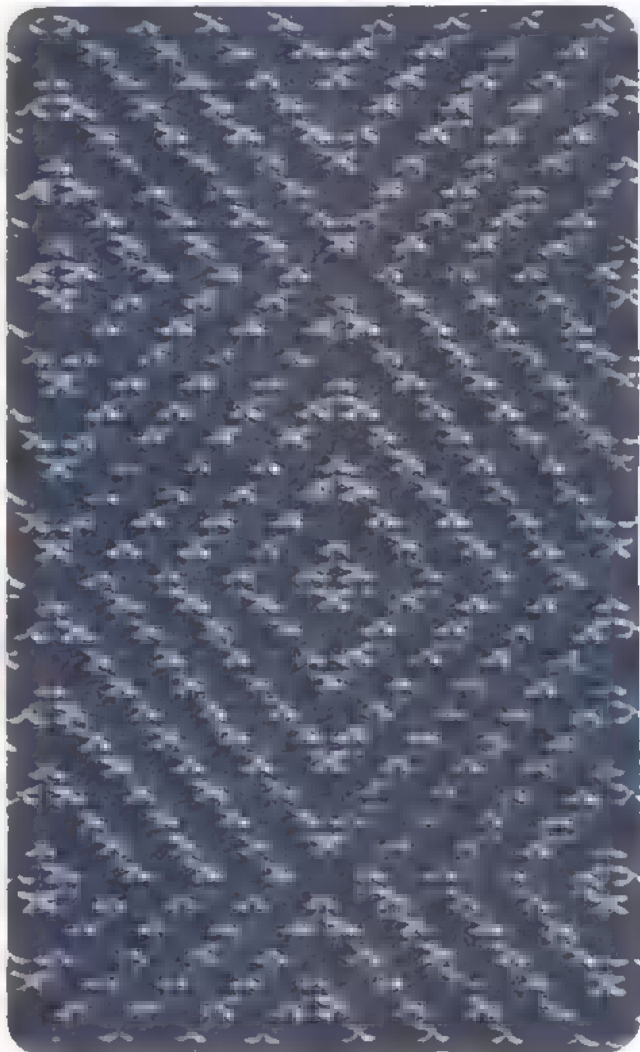

CARD No. 18 - A WEAVING <| |>


PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
	2 nd MAIN	STOCKINET	●	▼	↔
0		STOCKINET	●	▼	→
42		"	"	"	← (43)
		"	"	"	↔

SET STOP KNOB TO ▼ MARK.

CARD		No. 7 - A		WEAVING <12>		
PAT. RS.	YARN 2nd MAIN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)	
		STOCKINET				
0		STOCKINET				
58		"	"	"		
STOP						

SET STOP KNOB TO ▼ MARK.


ONE PATTERN - 2 STITCHES AND 4 ROWS

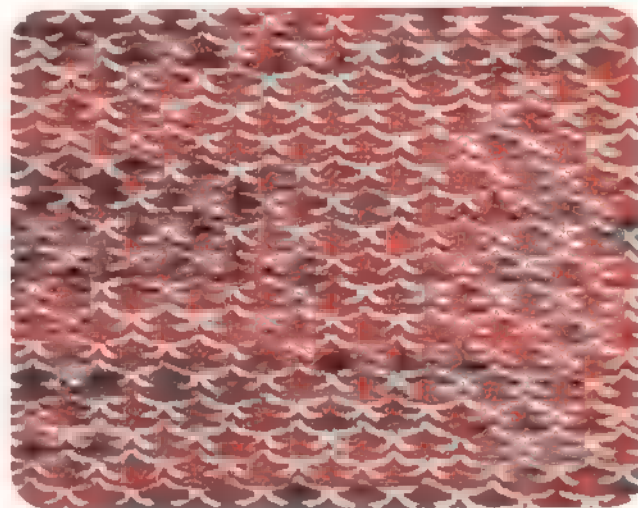


CARD		No. 1 - A		WEAVING <13>		
PAT. RS.	YARN 2nd MAIN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)	
0		STOCKINET				
0		STOCKINET				
"		"	"	"		

SET STOP KNOB TO ● MARK.


ONE PATTERN - 2 STITCHES AND 1 ROWS

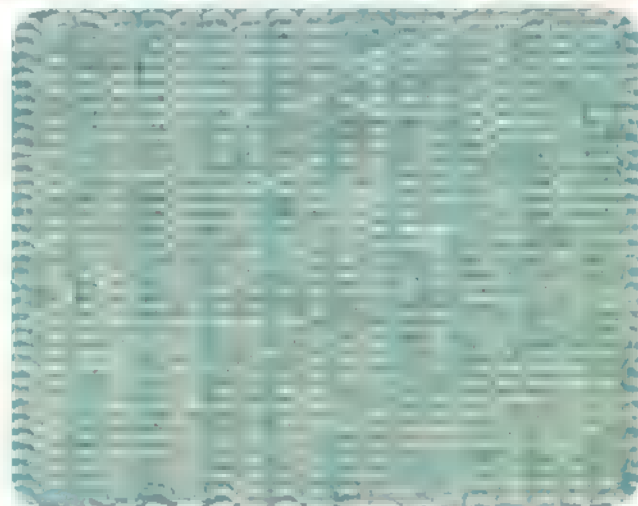

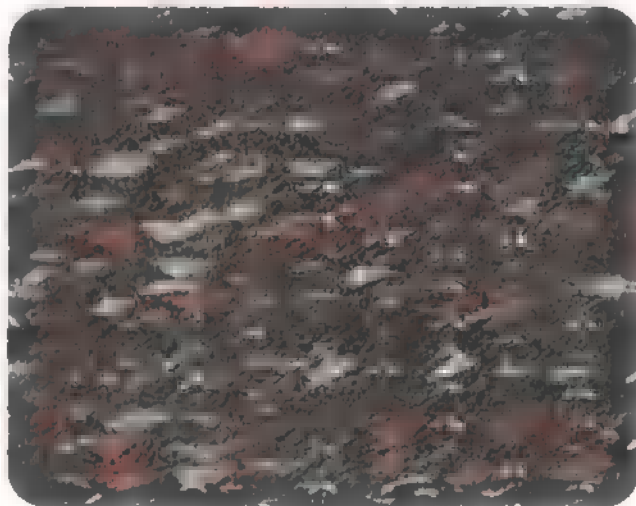


CARD		No. 5 - A		WEAVING < 14 >		
PAT. RS.	YARN 2nd MAIN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)	
		STOCKINET				
0		STOCKINET				
58		"	"	"		
STOP						
SET STOP KNOB TO ▼ MARK.						

ONE PATTERN - 4 STITCHES AND 2 ROWS

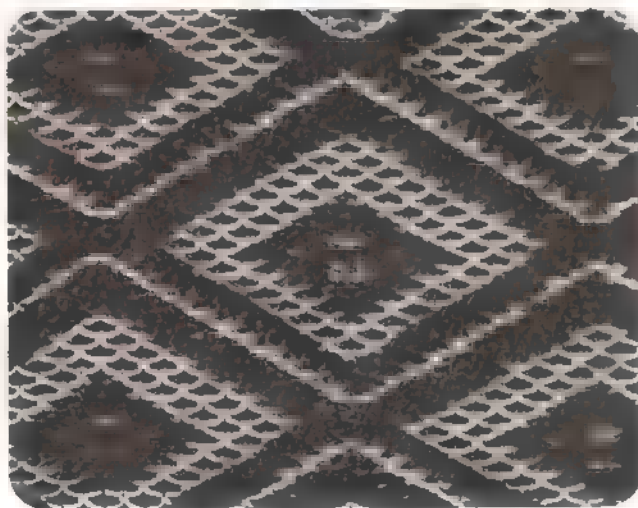



CARD		No. 16 - A		WEAVING < 15 >		
PAT. RS.	YARN 2nd MAIN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)	
		STOCKINET				
0		STOCKINET				
58		"	"	"		
STOP						
SET STOP KNOB TO ▼ MARK.						

ONE PATTERN - 24 STITCHES AND 30 ROWS


CARD		No. 10-A		WEAVING <16>		
PAT. RS.	YARN [2nd] [MAIN]	CAM LEV. ⬆	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)	
		STOCKINET	●	▼	↔	
		STOCKINET	●	▼	↔	
0		STOCKINET	●	▼	↔	
1		"	"	"	↔	
46		"	"	"	↔	
STOP						
 SET STOP KNOB TO ▼ MARK.						


ONE PATTERN-8 STITCHES AND 16 ROWS

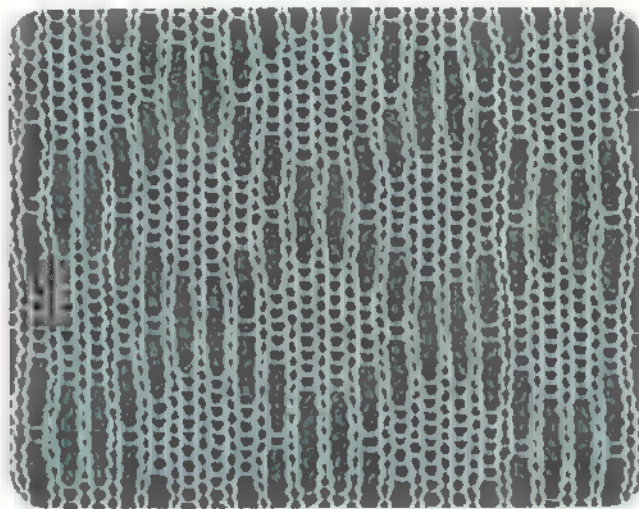

CARD		No. 3-A		WEAVING <17>		
PAT. RS.	YARN [2nd] [MAIN]	CAM LEV. ⬆	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)	
		STOCKINET	●	▼	↔	
		STOCKINET	●	▼	↔	
0		STOCKINET	●	▼	↔	
1		"	"	"	↔	
2		TUCK	"	"	↔	
3		"	"	"	↔	
4	*(1)	*(2)	"	"	↔	
58		"	"	"	↔	
STOP						
 SET STOP KNOB TO ▼ MARK.						
• (1) • (2) Repeat the above procedure.						

ONE PATTERN-4 STITCHES AND 8 ROWS

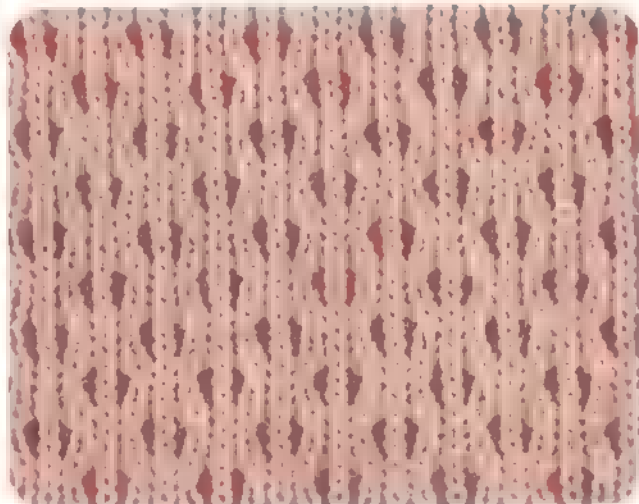


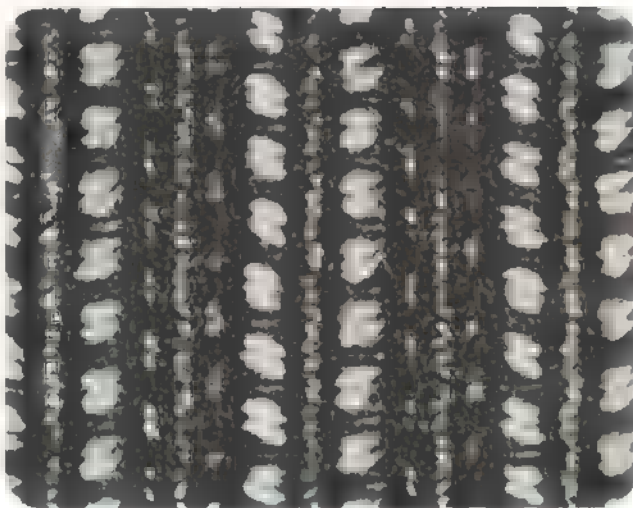

CARD		No. 4 - A		WEAVING <18>	
PAT. RS.	YARN 2nd MAIN	CAM LEV. 	RUSSEL LEV. 	SIDE LEV. (BOTH) 	D. (RS.)
		STOCKINET			
0		STOCKINET			
}		"	"	"	{ (59)
58		"	"	"	
STOP					

SET STOP KNOB TO ▼ MARK. <NEEDLE SELECTING>

ONE PATTERN-8 STITCHES AND 4 ROWS

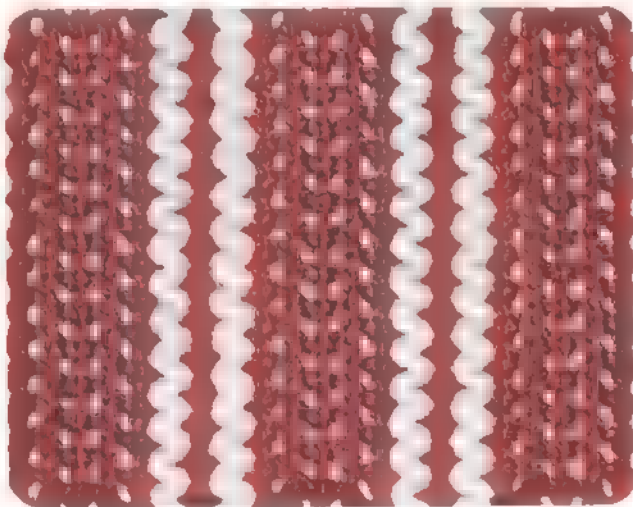

CARD	No. 5 — A	WEAVING <19>			
PAT. RS.	YARN 2nd MAIN	CAM LEV. 	RUSSEL LEV. 	SIDE LEV. (BOTH) 	D. (RS.)
		STOCKINET			
0		STOCKINET			
?		STOCKINET			
58		"	"	"	? (59)
STOP					

SET STOP KNOB TO ▼ MARK. (NEEDLE SELECTING)

|||||•|||•|||•|||•|||

0


ONE PATTERN—8 STITCHES AND 2 ROWS

CARD No. 3-A WEAVING<20>					
PAT. RS.	YARN 2nd MAIN	CAM LEV. 	RUSSEL LEV. 	SIDE LEV. (BOTH) 	D. (RS.)
		STOCKINET			
0		STOCKINET			
1		STOCKINET			
54		"	"	"	
STOP					
SET STOP KNOB TO ▼ MARK. <NEEDLE SELECTING>					

ONE PATTERN-4 STITCHES AND 8 ROWS



CARD No. 3-A WEAVING<21>					
PAT. RS.	YARN 2nd MAIN	CAM LEV. 	RUSSEL LEV. 	SIDE LEV. (BOTH) 	D. (RS.)
		STOCKINET			
0		STOCKINET			
1		STOCKINET			
2		"	"	"	
3		"	"	"	
4		"	"	"	
54		"	"	"	
STOP					
SET STOP KNOB TO ▼ MARK. ONE PATTERN-4 STITCHES AND 8 ROWS					

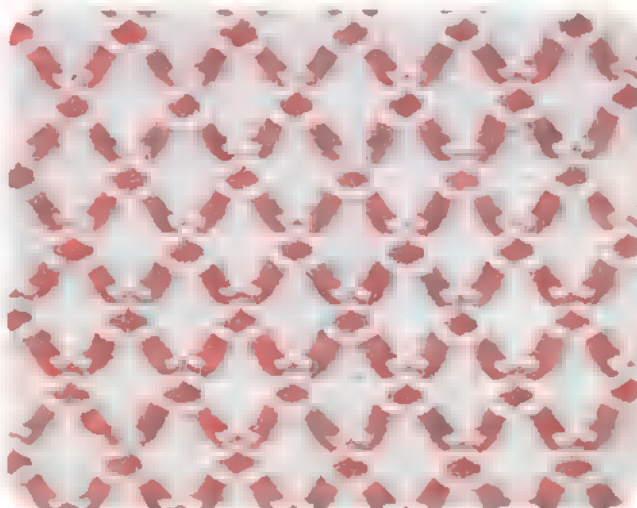



ONE PATTERN-4 STITCHES AND 2 ROWS


ONE PATTERN-6 STITCHES AND 3 ROWS

CARD No. 3-A LACE KNITTING<1>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET	●	▼	→
0		TUCK	●	▼	→
54		TUCK	●	▼	← (58)
STOP					

SET STOP KNOB TO ▼ MARK. (NEEDLE SELECTING)

ONE PATTERN-4 STITCHES AND 8 ROWS

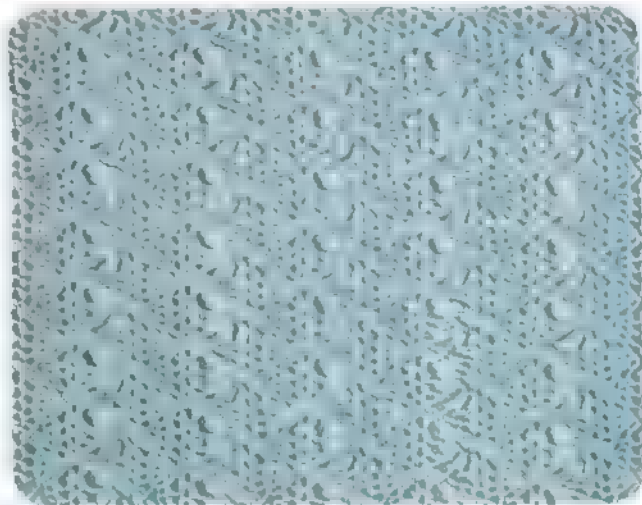



CARD No. 4-A LACE KNITTING<2>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET	●	▼	→
0		TUCK	●	▼	→
58		TUCK	●	▼	← (59)
STOP					


SET STOP KNOB TO ▼ MARK. (NEEDLE SELECTING)

ONE PATTERN-4 STITCHES AND 4 ROWS

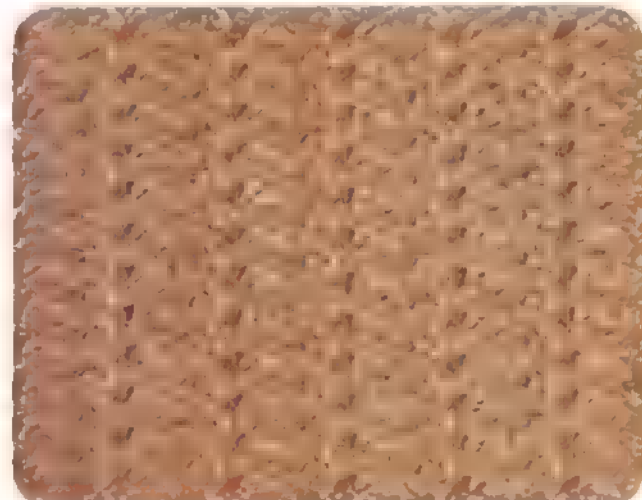

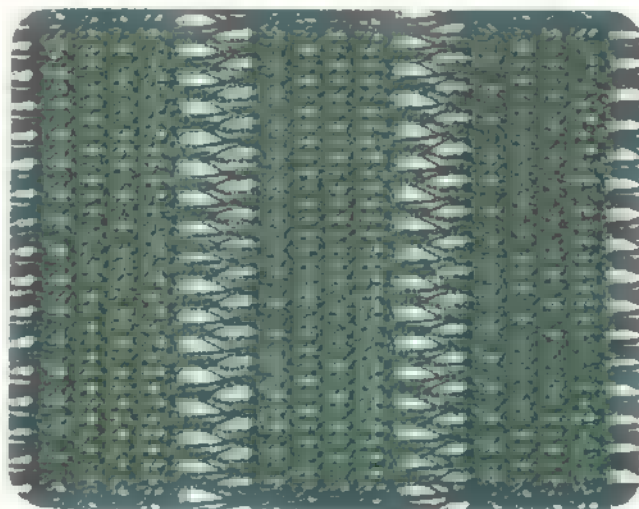



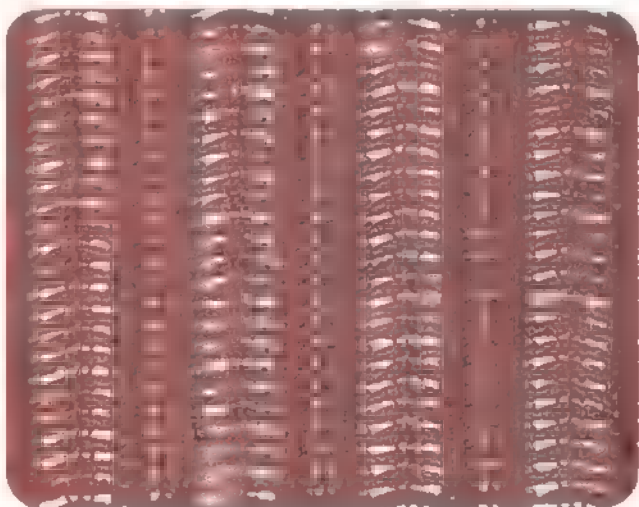




















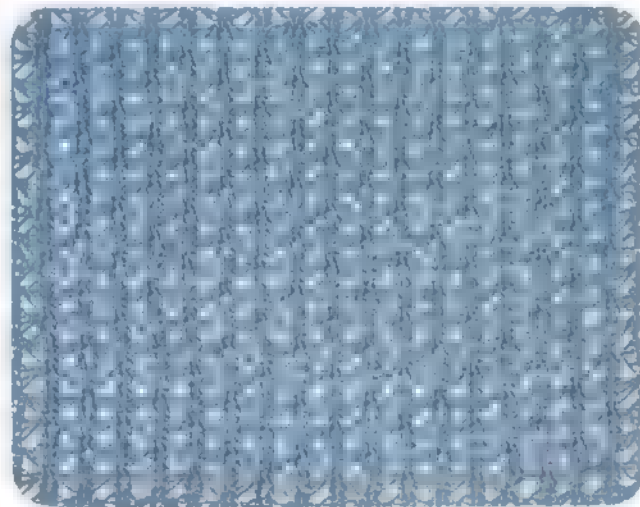






















CARD No. 7—A LACE KNITTING <3>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET	●	▼	↔
0		TUCK	●	▼	→
58		TUCK	●	▼	←
		"	"	"	↔ (59)
		"	"	"	↔
STOP					
SET STOP KNOB TO ▼ MARK. <NEEDLE SELECTING>					
ONE PATTERN—7 STITCHES AND 4 ROWS					





CARD No. 8—A LACE KNITTING <4>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET	●	▼	↔
		TUCK	●	▼	←
"		"	"	"	→
"		STOCKINET	"	"	←
"		*	"	"	→
SET STOP KNOB TO ● MARK. <NEEDLE SELECTING>					
ONE PATTERN—6 STITCHES AND 3 ROWS					

CARD No. 3—A LACE KNITTING<5>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
—		 STOCKINET			 
0		STOCKINET			
1		TUCK			
2		"	"	"	
3		"	"	"	
4		STOCKINET	"	"	
5		• Repeat the above procedure.			
6					 (51)
54			"	"	
STOP					
SET STOP KNOB TO ▼ MARK. (NEEDLE SELECTING) • • • •					
ONE PATTERN—4 STITCHES AND 8 ROWS					



CARD No. 1—A LACE KNITTING<6>					
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
—		 STOCKINET			 
0		TUCK			
1		TUCK			
2		"	"	"	
3		"	"	"	
58		"	"	"	 (59)
STOP					
SET STOP KNOB TO ▼ MARK. (NEEDLE SELECTING) • •					
ONE PATTERN—4 STITCHES AND 2 ROWS					

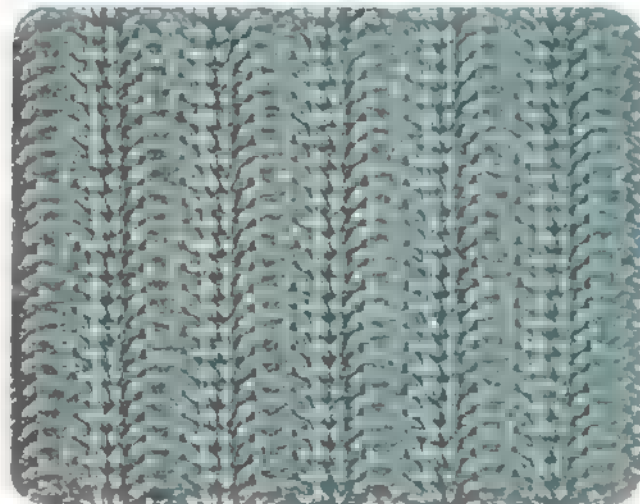

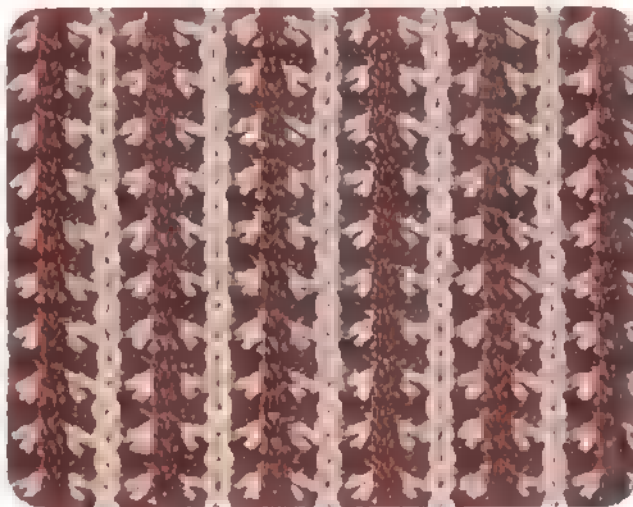










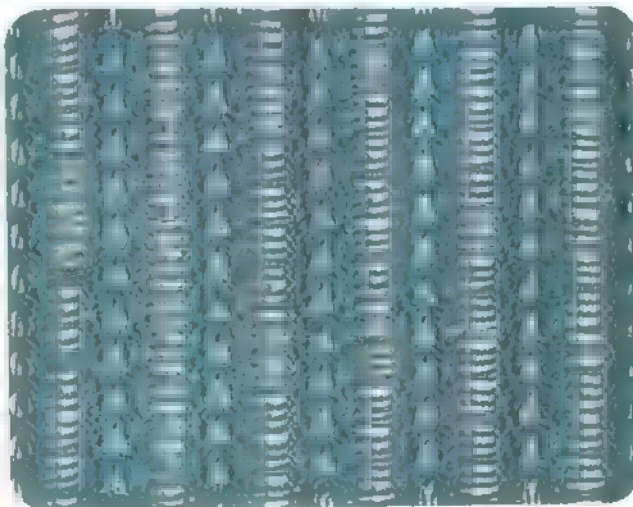





















CARD		No. 2 - A		LACE KNITTING <7>	
PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		TUCK			
1		TUCK			
2					
3					
4	*				
58					

STOP

SET STOP KNOB TO ▼ MARK. <NEEDLE SELECTING>
 * Change color at every third row.

ONE PATTERN - 4 STITCHES AND 4 ROWS



CARD		No. 5 - A		LACE KNITTING <8>	
PAT. RS.	YARN	CAM LEV. 	RUSSEL LEV. 	SIDE LEV. (BOTH) 	D. (RS.)   
0		STOCKINET			  
0		TUCK			  
"		"	"	"	  
"		"	"	"	  
"		STOCKINET	"	"	  
		*			

SET STOP KNOB TO ● MARK. <NEEDLE SELECTING>

• Repeat the above procedure.

111-111-111
0

ONE PATTERN-4 STITCHES AND 4 ROWS

^DCARD No. 4-A LACE KNITTING<9>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
		TUCK			
0		TUCK			
		"	"	"	
58		"	"	"	

STOP


(59)



SET STOP KNOB TO ▼ MARK. (NEEDLE SELECTING)



ONE PATTERN—8 STITCHES AND 4 ROWS

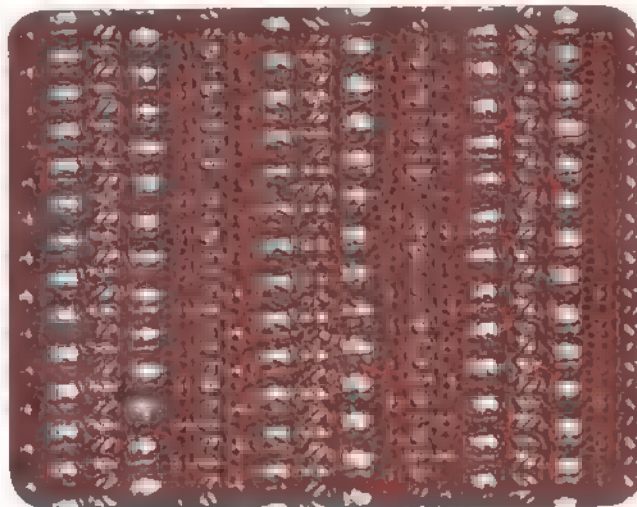

CARD No. 9-A LACE KNITTING<10>


[illegible]


SET STOP KNOB TO ● MARK. (NEEDLE SELECTING)

- Repeat the above procedure.



ONE PATTERN - 8 STITCHES AND 2 ROWS

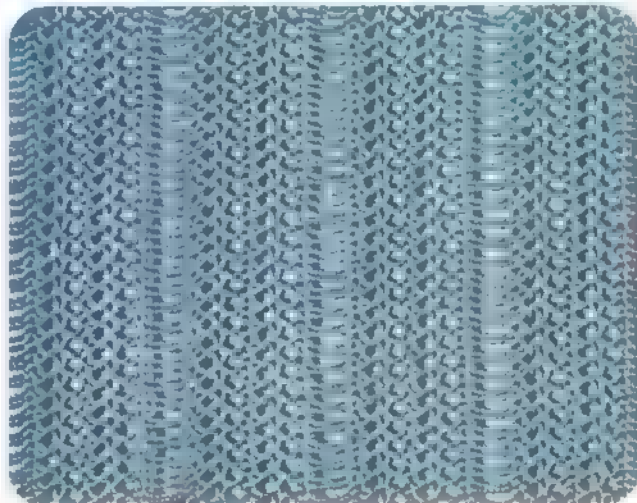

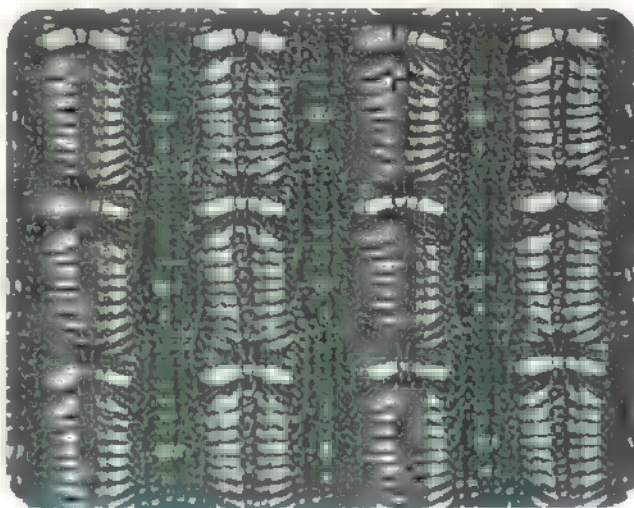























CARD No. 6					
PAT. RS.	YARN	CAM LEV.	MUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		TUCK			
}		TUCK			
46		"	"	"	
STOP					


SET STOP KNOB TO ▼ MARK. (NEEDLE SELECTING)


|||||

ONE PATTERN—8 STITCHES AND 16 ROWS



CARD	No. 2 - A	LACE KNITTING <12>			
PAT. RS.	YARN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
0	 	STOCKINET			  
0	 	TUCK			
"	 	"	"	"	
"	 	"	"	"	
"	 	STOCKINET	"	"	
		"			


SET STOP KNOB TO ● MARK. (NEEDLE SELECTING)
 • Repeat the above procedure.



 0

ONE PATTERN - 4 STITCHES AND 4 ROWS

LACE KNITTING <13>




ONE PATTERN-12 STITCHES AND 8 ROWS

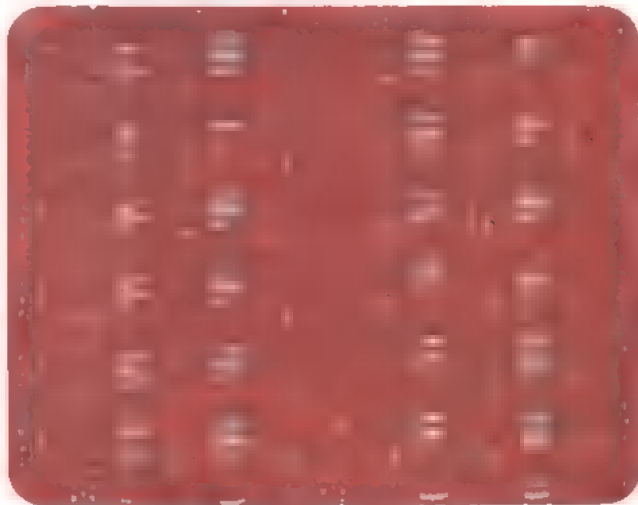


LACE KNITTING < | 4 >



ONE PATTERN-6 STITCHES AND 3 ROWS

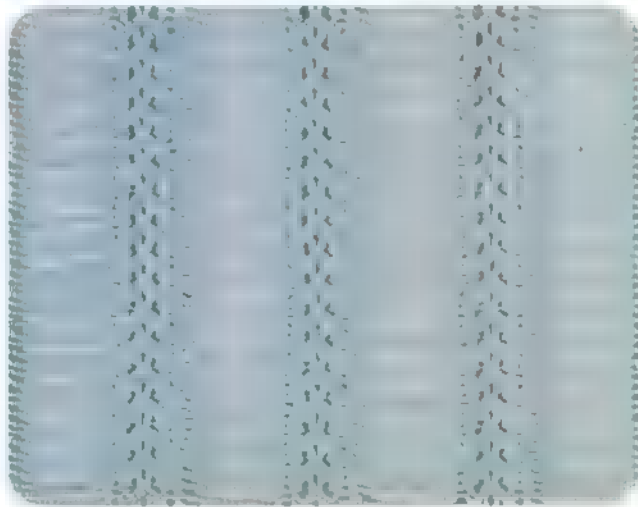

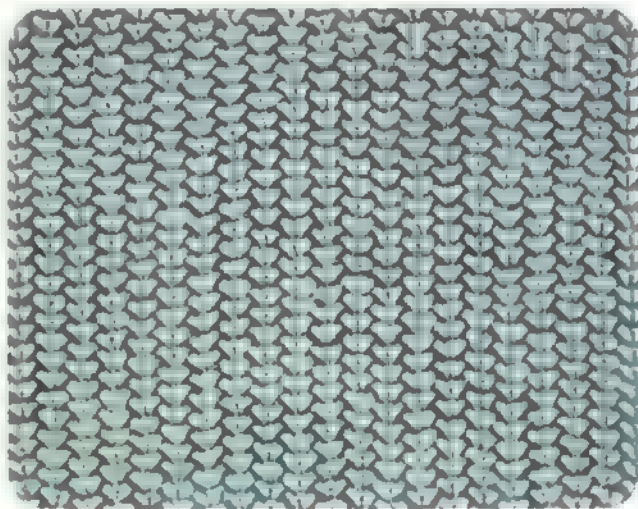


CARD No. 1 — A TWO THREAD KNITTING <1>

PAT. RS.	YARN 2nd MAIN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
0		TUCK			
7		TUCK			
58		"	"	"	
STOP					



SET STOP KNOB TO ▼ MARK.

ONE PATTERN—2 STITCHES AND 2 ROWS

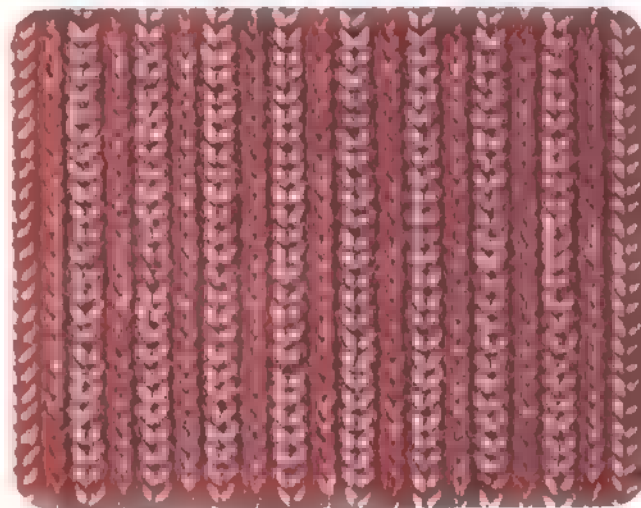

CARD No. 1 — TWO THREAD KNITTING <2>

PAT. RS.	YARN 2nd MAIN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
0		STOCKINET			
0		TUCK			
"		STOCKINET	"	"	
		*			



SET STOP KNOB TO ● MARK.

• Repeat the above procedure.

ONE PATTERN—2 STITCHES AND 2 ROWS

CARD No. 7—A TWO THREAD KNITTING <3>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
	2nd MAIN				
		STOCKINET	●	▼	→
0		STOCKINET	●	▼	→
		TUCK	●	▼	←
		STOCKINET	"	"	←
58		*	"	"	←
STOP					

SET STOP KNOB TO ▼ MARK.
* Repeat the above procedure.

ONE PATTERN—2 STITCHES AND 4 ROWS




CARD No. 5—A TWO THREAD KNITTING <4>

PAT. RS.	YARN	CAM LEV.	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
	2nd MAIN				
		STOCKINET	●	▼	→
0		TUCK	●	▼	→
		TUCK	●	▼	←
		"	"	"	←
58		"	"	"	←
STOP					

SET STOP KNOB TO ▼ MARK.

ONE PATTERN—4 STITCHES AND 2 ROWS



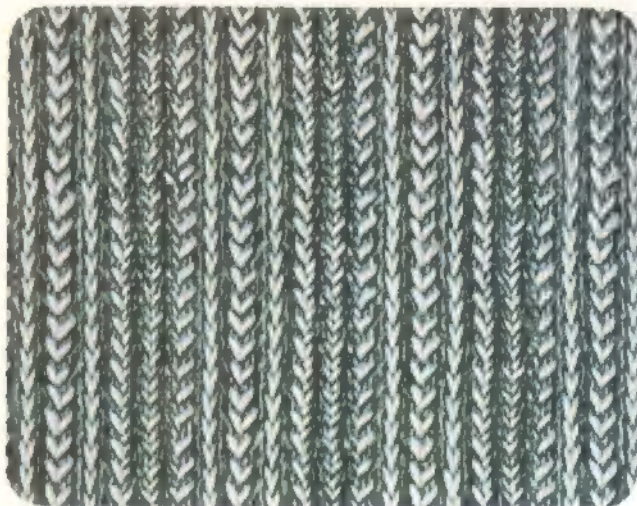

CARD No.9—A TWO THREAD KNITTING <5>


PAT. RS.	YARN 2nd MAIN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
0		STOCKINET			
0		TUCK			
"		STOCKINET	"	"	
		*			



SET STOP KNOB TO ● MARK.

* Repeat the above procedure.

ONE PATTERN—6 STITCHES AND 2 ROWS

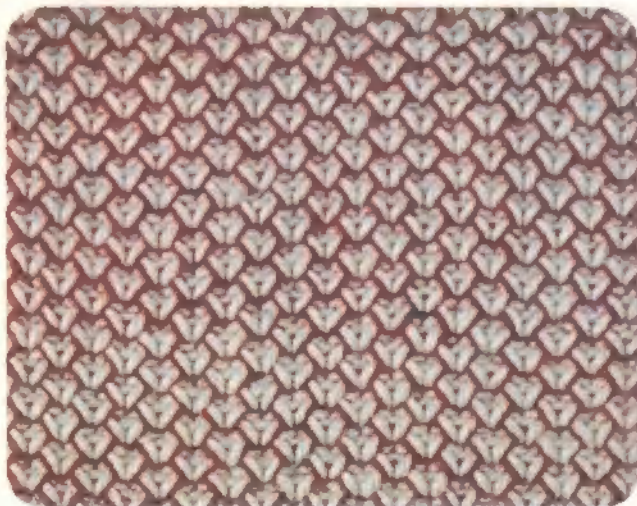

CARD No.7—A TWO THREAD KNITTING <6>

PAT. RS.	YARN 2nd MAIN	CAM LEV. 	RUSSEL LEV.	SIDE LEV. (BOTH)	D. (RS.)
		STOCKINET			
		TUCK			
0		TUCK			
}		"	"	"	}
58		"	"	"	(59)

STOP



SET STOP KNOB TO ▼ MARK.

ONE PATTERN—2 STITCHES AND 4 ROWS

SERIES OF PUNCHED CARDS FOR SALE SEPARATELY

To give you a broader selection of punched cards to choose from there has been eleven series placed on sale. Each series contains ten punched cards.

Series are classified into those of solid pattern, colored pattern, etc., respectively representing the series. Besides these representative patterns, each series includes other types of knitting too.

Series No. 21 Solid patterns

Series No. 22 Colored patterns

Series No. 23 Lace knitting

Series No. 24 Knit-in, large patterns

Series No. 25 Knit-in, large patterns

Series No. 26 Knit-in, large patterns

Series No. 27 Knit-in, small patterns

Series No. 28 Weaving, large patterns

Series No. 29 Weaving, small patterns

Series No. 30 Knit-in, special patterns

Series No. 31 Knit-in, special patterns



